


## FLOWBAR INSTALLATIONS

FlowBar is designed to fully integrate into the ceiling system.


The FlowBar system, with the exception of Border 77, is installed during the ceiling installation with unique mounting clips. Border 77 is installed after the drywall is in place.

Available in up to 12-foot lengths, FlowBar is straighter and often less expensive to install than conventional linear diffusers.

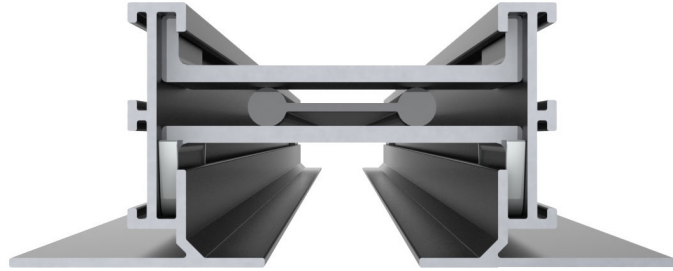


HARD CEILING APPLICATIONS


Redefine your comfort zone.™ | www.titus-hvac.com

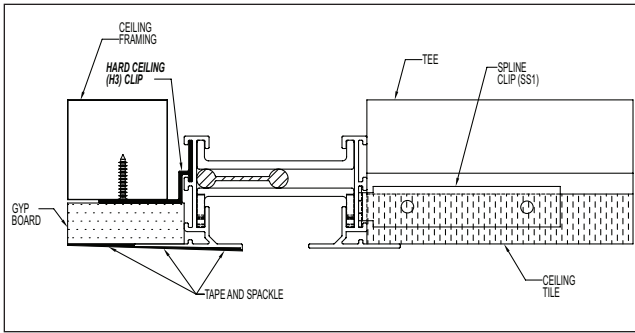


Ceiling / Ceiling - Border 26

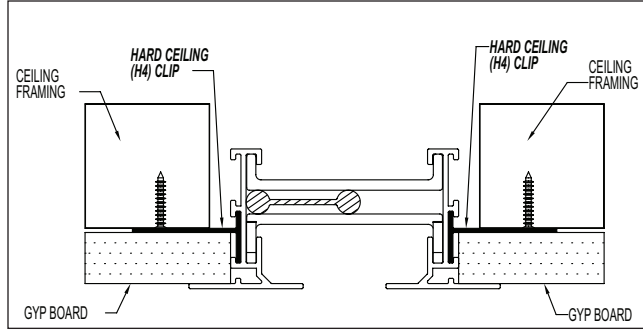


Ceiling / Ceiling - Border 66

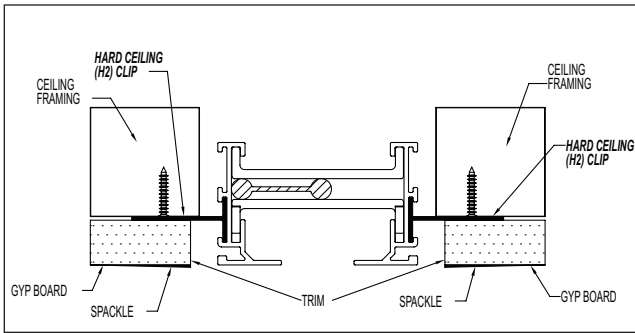


Ceiling / Ceiling Reveal - Border 11

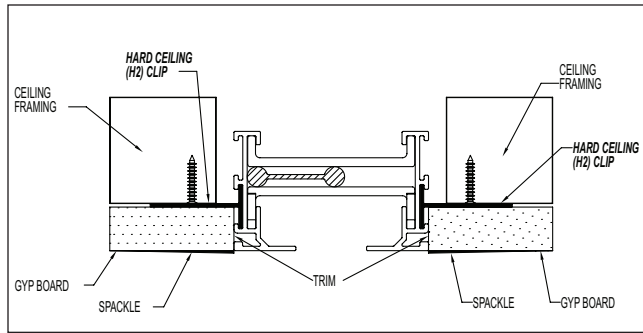


Ceiling / Ceiling - Border 11

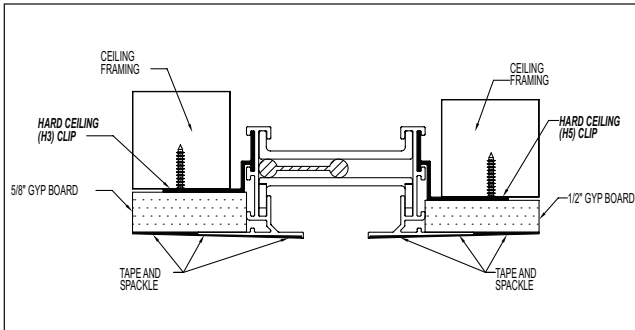

Ceiling / Ceiling - Border 22

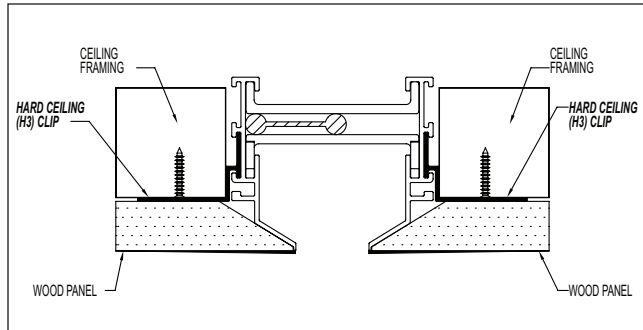

Ceiling / Ceiling - Border 55

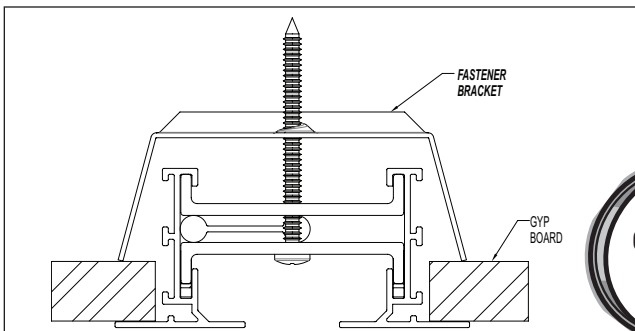


Ceiling / Ceiling - Border 77




Items in *italics* are supplied by Titus  
Items not *italicized* are supplied by others


HARD CEILING APPLICATIONS

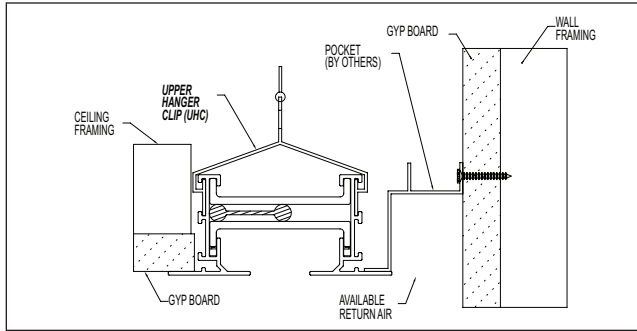


Ceiling / Wall Reveal - Border 66

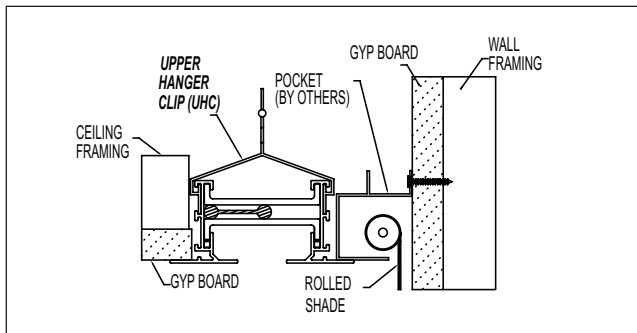


Ceiling / Wall Pocket - Border 66

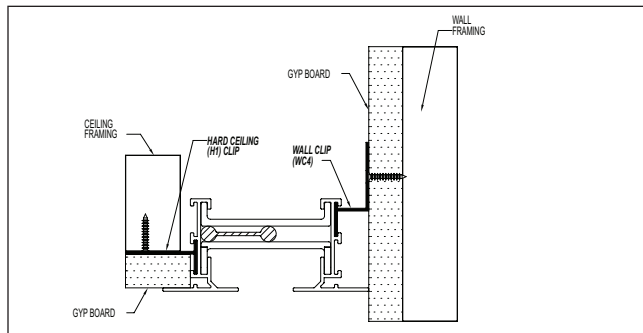

Ceiling / Wall - Border 66

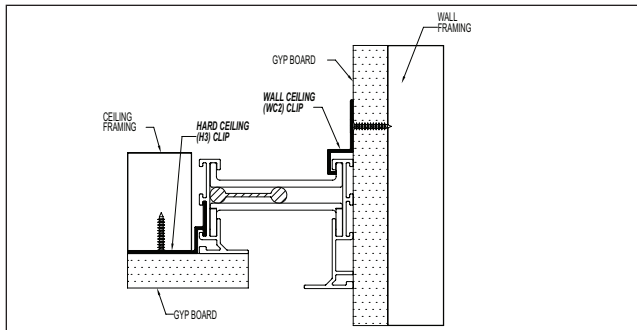

Ceiling / Wall - Border 14

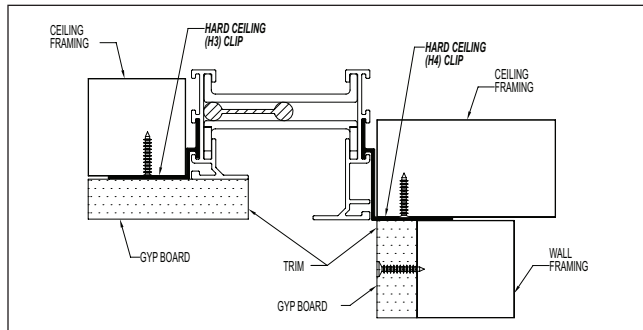


Ceiling / Offset - Border 14




Items in *italics* are supplied by Titus.  
Items not *italicized* are supplied by others.




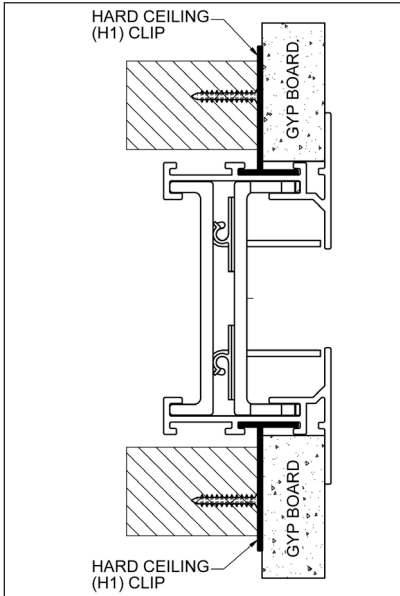

Side Wall - Exposed Flange - Border 66

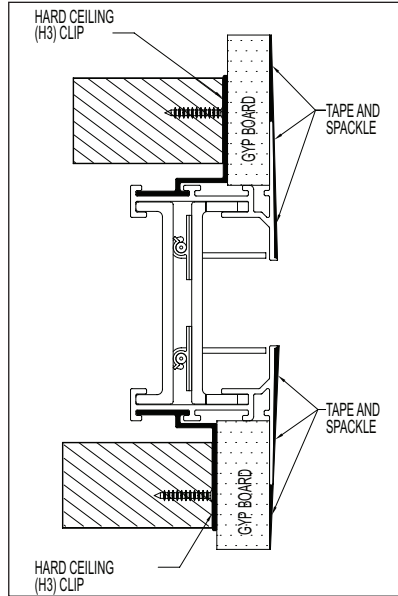


Side Wall - Hidden Flange - Border 22

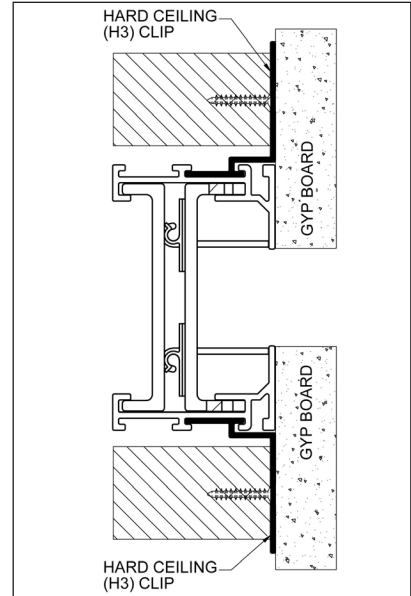


Side Wall - Hidden Flange - Border 11




ACOUSTICAL CEILING APPLICATIONS

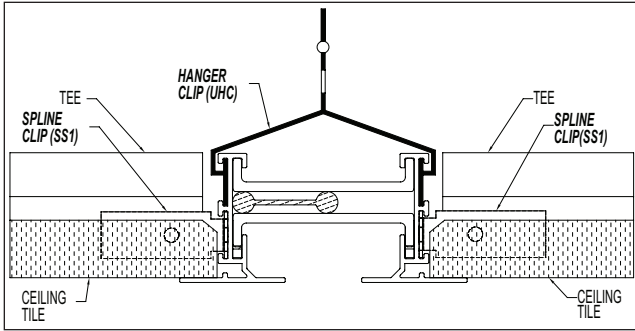


Ceiling / Ceiling - Border 66

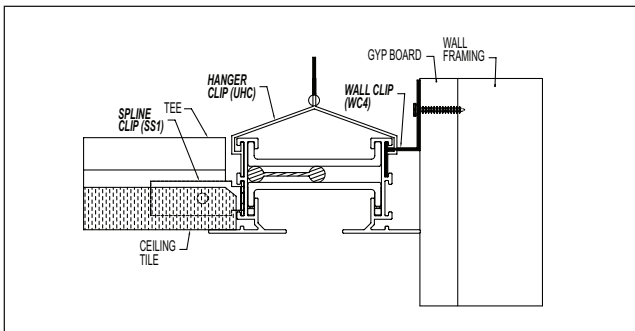


Ceiling / Wall Reveal - Border 66

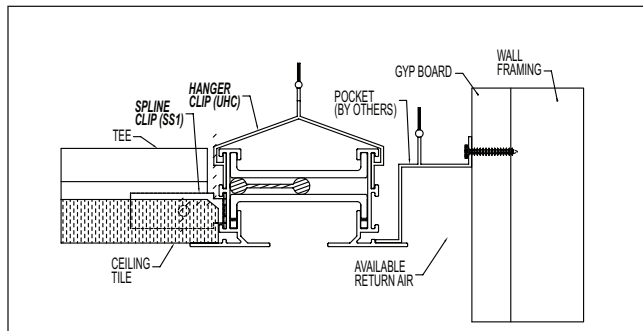

Ceiling / Wall Pocket - Border 66

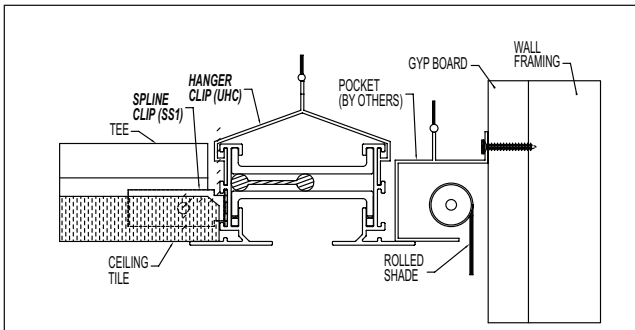


Ceiling / Wall Pocket - Border 66

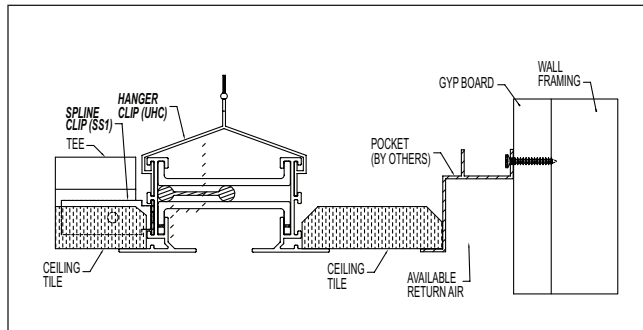

Ceiling / Ceiling / Pocket - Border 66

Items in *italics* are supplied by Titus  
Items not *italicized* are supplied by others




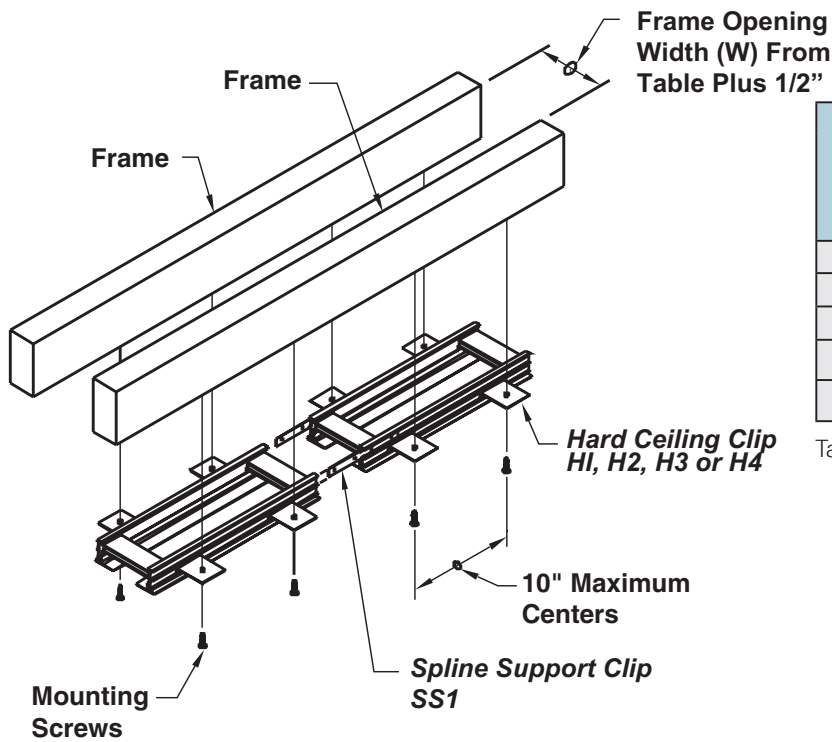

FlowBar Model	Frame Opening Width (W)		
	1-SLOT	2-SLOT 2CRA & 2CRB	2-SLOT 2CRN
FL-10	3 <sup>3</sup> / <sub>4</sub>	5 <sup>11</sup> / <sub>16</sub>	6 <sup>9</sup> / <sub>16</sub>
FL-15	4 <sup>1</sup> / <sub>4</sub>	7 <sup>11</sup> / <sub>16</sub>	8 <sup>9</sup> / <sub>16</sub>
FL-20	5 <sup>1</sup> / <sub>4</sub>	9 <sup>11</sup> / <sub>16</sub>	10 <sup>9</sup> / <sub>16</sub>
FL-25	6 <sup>1</sup> / <sub>4</sub>	11 <sup>11</sup> / <sub>16</sub>	12 <sup>9</sup> / <sub>16</sub>
FL-30	7 <sup>1</sup> / <sub>4</sub>	13 <sup>11</sup> / <sub>16</sub>	14 <sup>9</sup> / <sub>16</sub>

Table 1. Frame Opening Dimensions

Refer to Titus FlowBar IOM for additional installation details

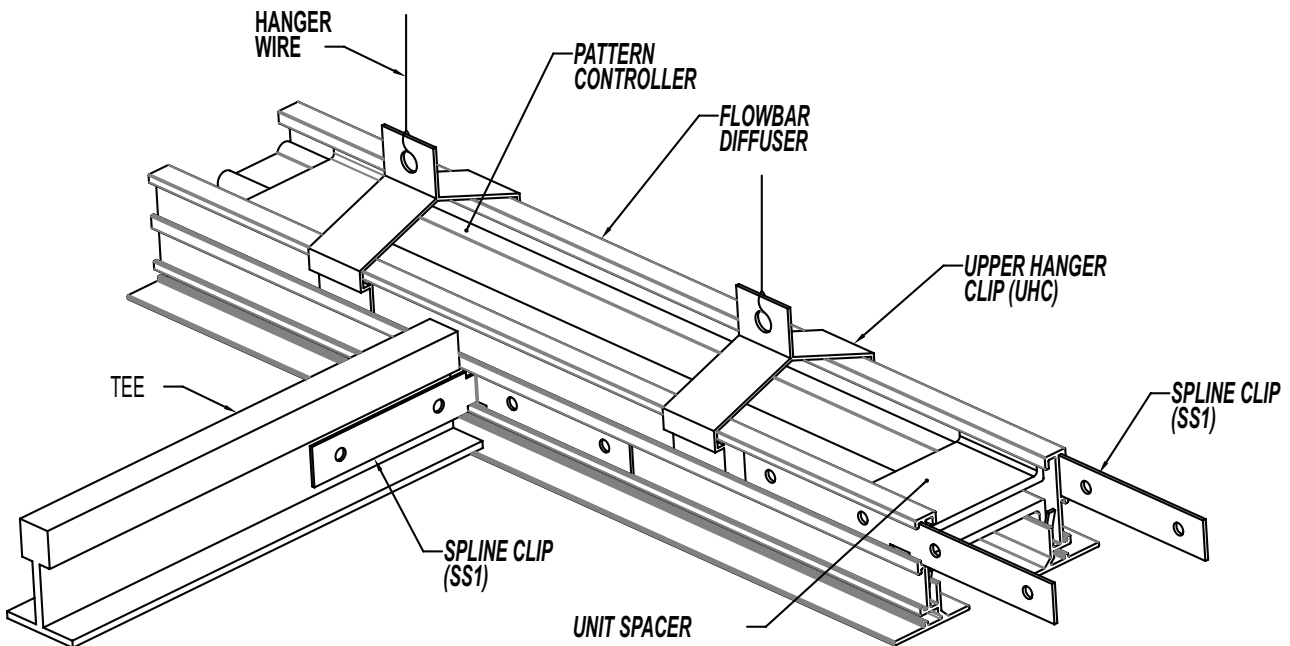

Refer to Titus FlowBar IOM for additional installation details

Items in italics are supplied by Titus  
Items not italicized are supplied by others