SEE NOTE 5

8-1/2 [216]

[216]



Submittal

TBVD External Space Requirements

Model TBVD Direct Drive Blower Coil Unit External Space Requirement


DIMENSIONS

SIZE	Α	В	С
08	19	30	20
	[483]	[762]	[508]
12	19	36	25
	[483]	[914]	[635]
16	19	44	20
	[483]	[1118]	[508]
20	25	50	20
	[635]	[1270]	[508]
30	25	59	20
	[635]	[1499]	[508]
40	25	68	20
	[635]	[1727]	[508]

4-1/2 [114] -COIL ACCESS AND FAN ACCESS ACCESS PANEL BOTH SIDES **TOP VIEW**

SIDE VIEW

- 1.All dimensions are Inches [millimeters].All dimensions are ±1/4" [6mm]. Metric values are soft conversion.
- 2. Right hand unit shown, left hand unit opposite. Motor/drive location may be specified Left or Right Hand. Standard control enclosure location matches motor/drive position.
- 3. Provide sufficient clearance to permit access to controls and comply with applicable codes and ordinances.
- 4. Flat filter rack may be located at unit inlet as required. See drawing BC-TBHD-16.0 for filter rack details.
- 5. Dual blower units require service access to both side access panels for moto/blower removal.

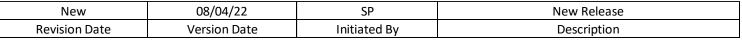

All rights reserved. No part of this work may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, or by any information storage retrieval system without permission in writing from Titus.