

Air Flow Factors


Model: N-1


Airflow Measurements:

- 1. Place the Alnor velometer probe at the locations indicated in the diffuser slot.
- 2. Record and average the velocity readings.
- 3. Calculate flow rate using the following equation.

Flow Rate: CFM = A_{κ} x Average Velocity

Note: Select and use the applicable factor from the following table.

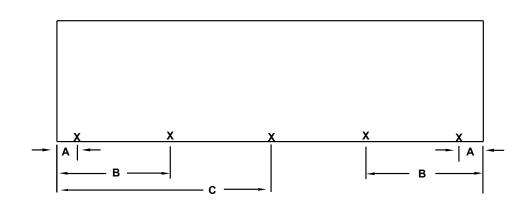

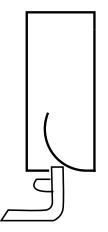

Alnor Probe 2220-A

N-1 Air Flow Factors

Dimensions (inches)			Horizontal A _k
Α	В	C	
1	6	24	0.120
1	9	18	0.180
1	12	24	0.240
1	15	30	0.300
	`	A B 1 6 1 9 1 12 1 15	A B C 1 6 24 1 9 18 1 12 24 1 15 30

Note: Same A_K factors are applicable to Alnor 6070, 6000, 2220, or 2220-A probes.



Note: Refer to the Balancing Application Guide for more information about balancing air systems.