



TAO ((())) TEMPERATURE AMBIENT OPTIMIZER

chilled beams

TAO UNIT DIMENSIONS

DIMENSIONS

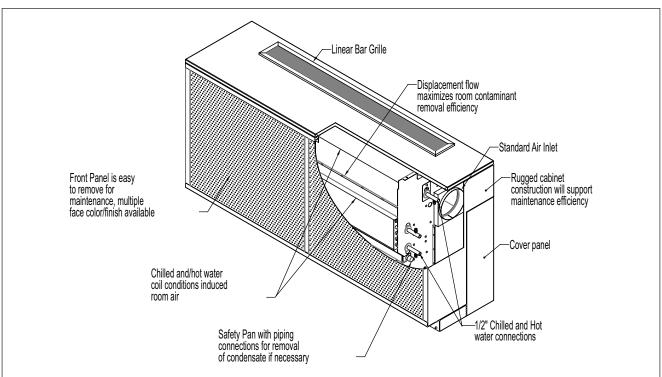

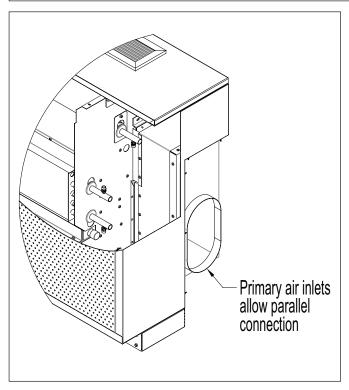

All units are shipped as right air inlet connecting. To modify the unit to allow a left side air connection, simply remove the cover panel and cap from the left side and replace them on the right. For center units in series, remove the cover panel and cap from the left side and discard.

Redefine your comfort zone. ™ | www.titus-hvac.com






TAO ((())) TEMPERATURE AMBIENT OPTIMIZER

chilled beams

DIMENSIONS


TAO UNIT DIMENSIONS

Redefine your comfort zone. TM | www.titus-hvac.com

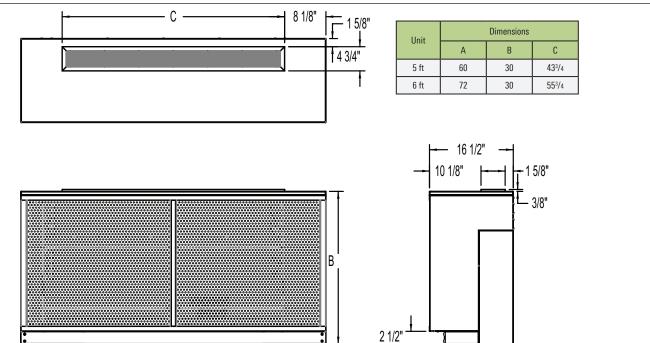

TAO UNIT DIMENSIONS

Α

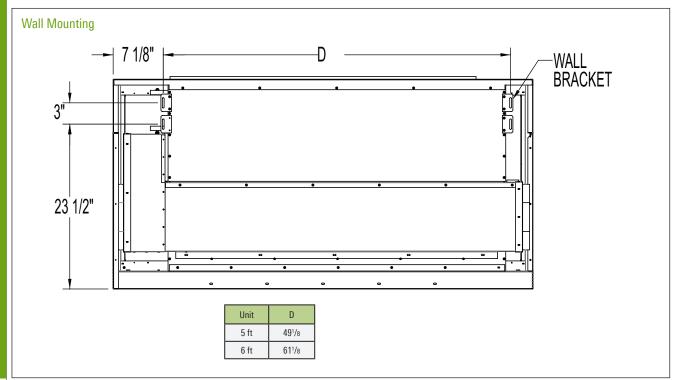



Titus Redefine your comfort zone. TM

DUCT CONNECTION LOCATION

DIMENSIONS

8 inch oval (For multi-unit installations) 8 inch oval (For multi-unit installations) 8 inch oval (For multi-unit installations) 9 3/8" 10 1/4"

WATER COIL AND CONDENSATE CONNECTION LOCATIONS

