

DIMENSIONS

vav retrofit terminals

Available Models:
EXX, PECX and
ECV Series

Note: Units are not insulated


Inlet Size	Total cfm Range
4	0-225
5	0-350
6	0-500
7	0-650
8	0-900
9	0-1050
10	0-1400
12	0-2000
14	0-3000
16	0-4000
18	0-5200

Size	cfm Range	A	E
4	0-225	8	2 ³ / ₄
5	0-350	9	2 ³ / ₄
6	0-500	10	2 ³ / ₄
7	0-650	11	2 ³ / ₄
8	0-900	12	1 ³ / ₄
9	0-1050	13	1 ³ / ₄
10	0-1400	14	3 ⁴ / ₈
12	0-2000	16	0
14	0-3000	18	0
16	0-4000	20	0


Size	cfm Range	A	D*	E	L
4	0-225	3 ⁹ / ₁₆	3 ⁷ / ₈	2 ¹ / ₈	20
5	0-350	3 ⁹ / ₁₆	4 ⁷ / ₈	2 ¹ / ₈	20
6	0-500	3 ⁹ / ₁₆	5 ⁷ / ₈	2 ¹ / ₈	20
7	0-650	4 ¹ / ₁₆	6 ⁷ / ₈	1 ⁵ / ₈	16
8	0-900	4 ⁹ / ₁₆	7 ⁷ / ₈	1 ¹ / ₈	16
9	0-1050	5 ¹ / ₁₆	8 ⁷ / ₈	5 ⁵ / ₈	20
10	0-1400	5 ⁹ / ₁₆	9 ⁷ / ₈	1 ¹ / ₈	20
12	0-2000	6 ⁹ / ₁₆	11 ⁷ / ₈	0	20
14	0-3000	7 ⁹ / ₁₆	13 ⁷ / ₈	0	24
16	0-4000	8 ⁹ / ₁₆	15 ⁷ / ₈	0	24

Size	cfm Range	A	D*	E	L
4	0-225	3 ⁹ / ₁₆	3 ⁷ / ₈	2 ¹ / ₈	20
5	0-350	3 ⁹ / ₁₆	4 ⁷ / ₈	2 ¹ / ₈	20
6	0-500	3 ⁹ / ₁₆	5 ⁷ / ₈	2 ¹ / ₈	16
7	0-650	4 ¹ / ₁₆	6 ⁷ / ₈	1 ⁵ / ₈	16
8	0-900	4 ⁹ / ₁₆	7 ⁷ / ₈	1 ¹ / ₈	16
9	0-1050	5 ¹ / ₁₆	8 ⁷ / ₈	5 ⁵ / ₈	20
10	0-1400	5 ⁹ / ₁₆	9 ⁷ / ₈	1 ¹ / ₈	20
12	0-2000	6 ⁹ / ₁₆	11 ⁷ / ₈	0	20
14	0-3000	7 ⁹ / ₁₆	13 ⁷ / ₈	0	24
16	0-4000	8 ⁹ / ₁₆	15 ⁷ / ₈	0	24

EXX

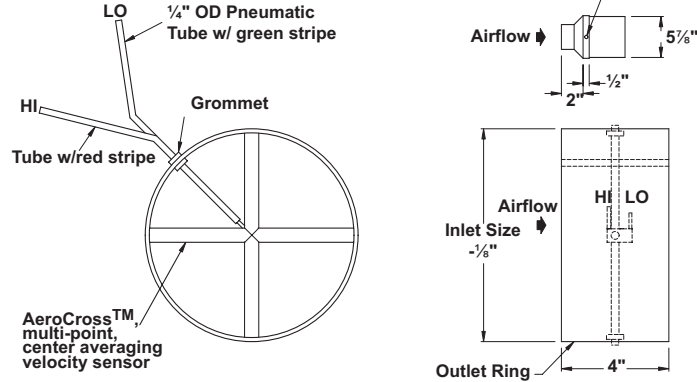


PECX

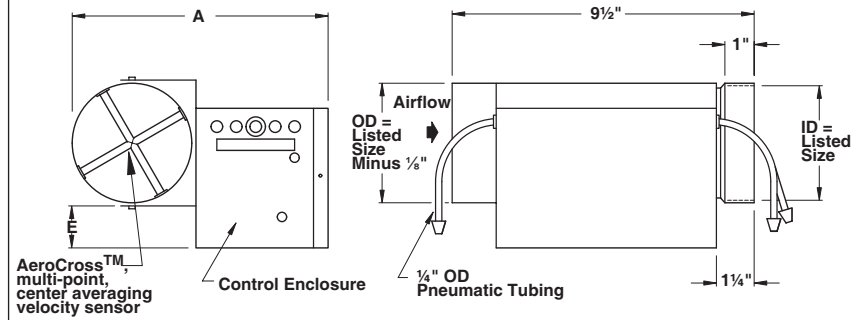


Note: Right hand control location, as shown, is standard on all models. Left hand is optional.

PECV / Pressure Dependent

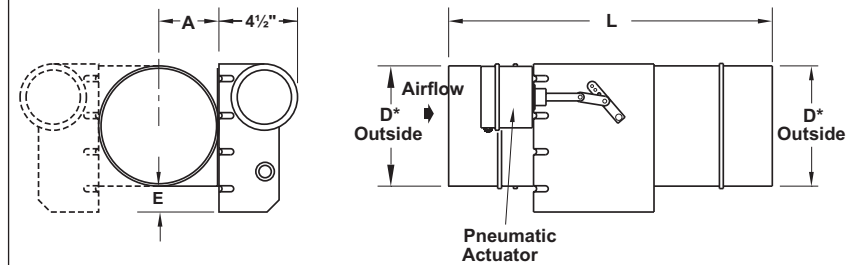

Note: Right hand control location, as shown, is standard on all models. Left hand is optional.

PECV / Pressure Independent

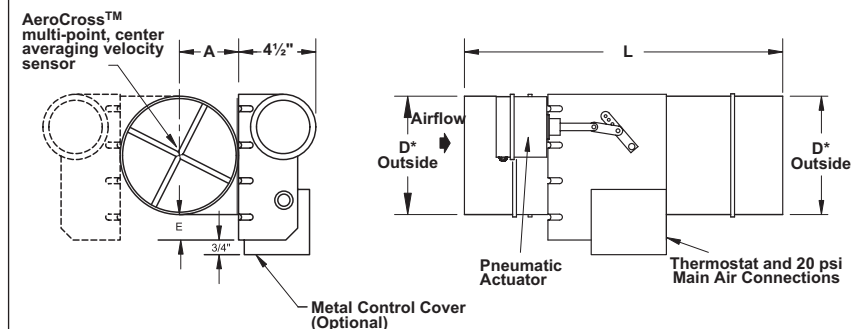


Note: Right hand control location, as shown, is standard on all models. Left hand is optional.

DIMENSIONS

vav retrofit terminals

Size	cfm Range	A	D*	J	L
4	0-225	3 ⁹ / ₁₆	3 ⁷ / ₈	4	20
5	0-350	3 ⁹ / ₁₆	4 ⁷ / ₈	4	20
6	0-500	3 ⁹ / ₁₆	5 ⁷ / ₈	2	16
7	0-650	4 ¹ / ₁₆	6 ⁷ / ₈	2	16
8	0-900	4 ⁹ / ₁₆	7 ⁷ / ₈	2	16
9	0-1050	5 ¹ / ₁₆	8 ⁷ / ₈	4	20
10	0-1400	5 ⁹ / ₁₆	9 ⁷ / ₈	4	20
12	0-2000	6 ⁹ / ₁₆	11 ⁷ / ₈	4	20
14	0-3000	7 ⁹ / ₁₆	13 ⁷ / ₈	6	24
16	0-4000	8 ⁹ / ₁₆	15 ⁷ / ₈	6	24


EECV

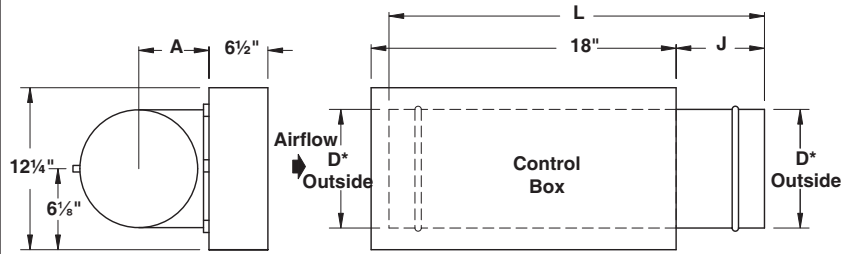

Note: Right hand control location, as shown, is standard on all models. Left hand is optional.

Size	cfm Range	A	D*	J	L
4	0-225	3 ⁹ / ₁₆	3 ⁷ / ₈	4	20
5	0-350	3 ⁹ / ₁₆	4 ⁷ / ₈	4	20
6	0-500	3 ⁹ / ₁₆	5 ⁷ / ₈	2	16
7	0-650	4 ¹ / ₁₆	6 ⁷ / ₈	2	16
8	0-900	4 ⁹ / ₁₆	7 ⁷ / ₈	2	16
9	0-1050	5 ¹ / ₁₆	8 ⁷ / ₈	4	20
10	0-1400	5 ⁹ / ₁₆	9 ⁷ / ₈	4	20
12	0-2000	6 ⁹ / ₁₆	11 ⁷ / ₈	4	20
14	0-3000	7 ⁹ / ₁₆	13 ⁷ / ₈	6	24
16	0-4000	8 ⁹ / ₁₆	15 ⁷ / ₈	6	24


AECV

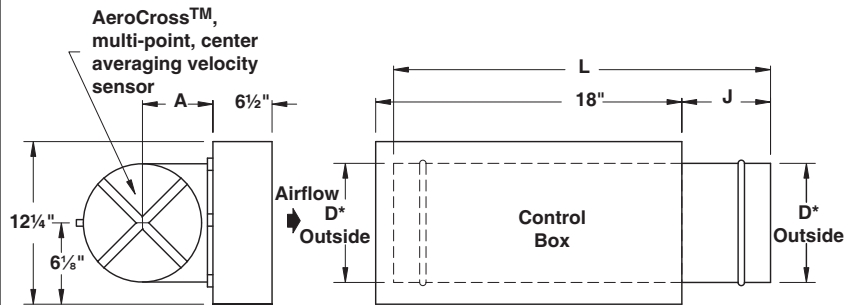

Note: Right hand control location, as shown, is standard on all models. Left hand is optional.

Size	cfm Range	A	D*	J	L
4	0-225	3 ⁹ / ₁₆	3 ⁷ / ₈	4	20
5	0-350	3 ⁹ / ₁₆	4 ⁷ / ₈	4	20
6	0-500	3 ⁹ / ₁₆	5 ⁷ / ₈	2	16
7	0-650	4 ¹ / ₁₆	6 ⁷ / ₈	2	16
8	0-900	4 ⁹ / ₁₆	7 ⁷ / ₈	2	16
9	0-1050	5 ¹ / ₁₆	8 ⁷ / ₈	4	20
10	0-1400	5 ⁹ / ₁₆	9 ⁷ / ₈	4	20
12	0-2000	6 ⁹ / ₁₆	11 ⁷ / ₈	4	20
14	0-3000	7 ⁹ / ₁₆	13 ⁷ / ₈	6	24
16	0-4000	8 ⁹ / ₁₆	15 ⁷ / ₈	6	24

DECV

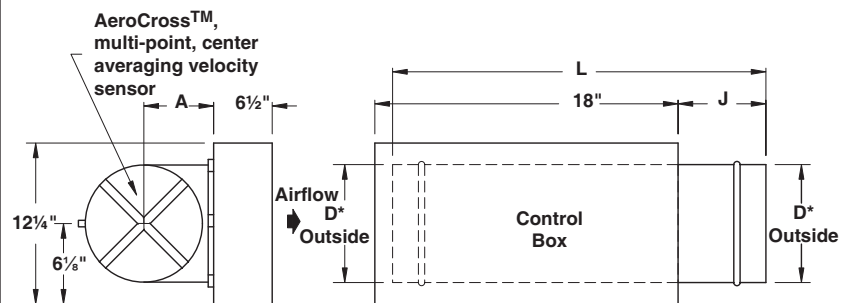

Note: Right hand control location, as shown, is standard on all models. Left hand is optional.

Note: Units are not insulated. Sizes 4 and 5 built with the same casing as Size 6, with a duct adapter added to each end to accommodate the smaller duct size.