


Overview


OTHER AVAILABLE BORDER TYPES

Helios / Border Type 3 (Lay-in)

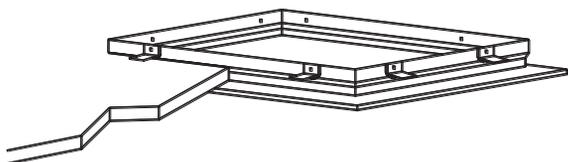


The Helios series of diffusers are not available with standard border type 1. For surface mounting applications, the TRM optional Rapid Mount frame can be used. Using border option TRM, the Helios series diffusers are shipped with border type 3 (lay-in). The TRM frame is shipped separate for field installation. Once the TRM is installed, the Helios diffuser simply lays into the frame. This option allows access into the ceiling after installation.

Helios / Border Type NT (Narrow Tee)

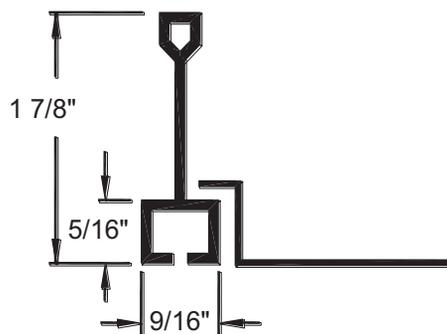


Helios / Border Type 3 (Lay-in)

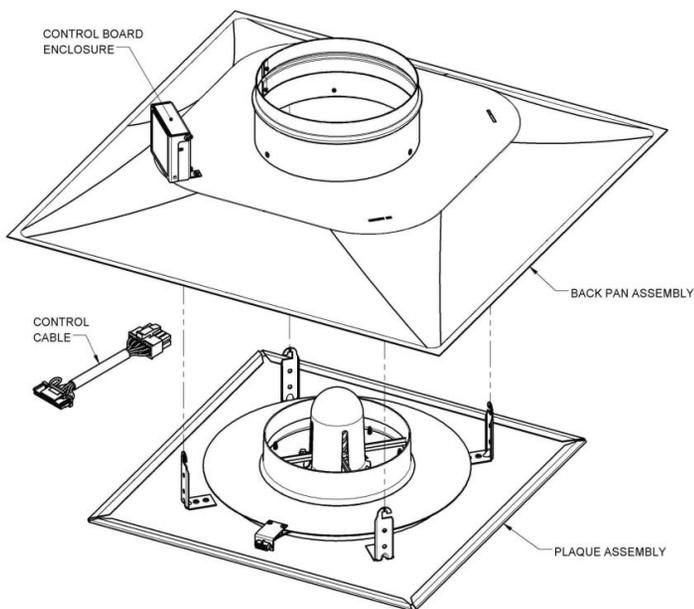

Installing Face Panel

 1. Insert the hook brackets into the slots in the backpan.
2. Rotate the face panel clockwise until...
3. The hooks positively engage in the secondary slots in the backpan.





Removing Face Panel

1. Lift the faceplate towards the backpan to disengage the hook brackets from the backpan slots.
2. Rotate the faceplate counter-clockwise.
3. Lower the faceplate away from the backpan.

Adjusting Optional Damper

1. Remove face panel as above.
2. Use flat blade screwdriver to turn operator shaft at center of damper.
3. Replace face panel

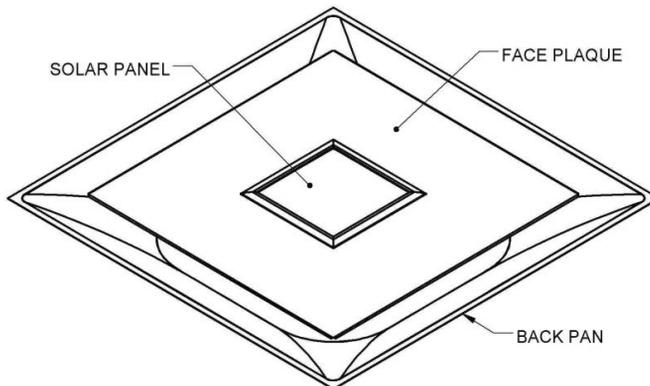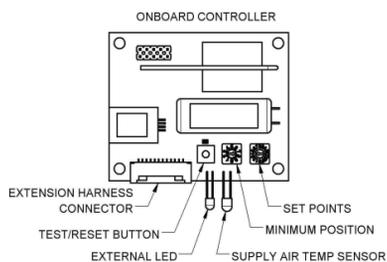

Redefine your comfort zone.™ | www.titus-hvac.com

OVERVIEW