



INSTALLATION DETAILS

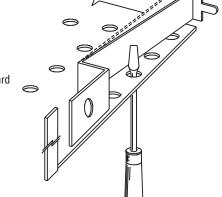


2. Repeat on opposite side




3. Face will swing down. For complete removal, remove pivot pin.

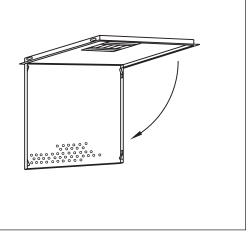


    
ADJUSTING PATTERN CONTROLLERS ON MODEL PAS-FR

 


 


 


 













ACCESSORIES (OPTIONAL)

FIRE DAMPER WITH EXTENDED NECK

UL Listed Fusible Volume Adjustment Control

Allows adjustment of fire damper blades to balance airflow. A hex key (by others) is required for adjustment.

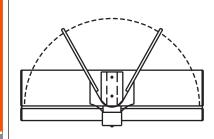

Model PAS-FR

Duct Size D (Round/Square)	Optional Extended Neck Height (Round/Square)
6" Dia. / 6 x 6	83/4" / 81/4"
8" Dia. / 8 x 8	83/4" / 81/4"
10" Dia. / 10 x 10	83/4" / 81/4"
12" Dia. / 12 x 12	103/4" / 101/4"
14" Dia.	103/4"
16" Dia.	13 ³ / ₄ "

Model PAR-FR

Duct Size D	Extended Neck Height
10 x 10	71/2"
22 x 10	12½"
22 x 22	12½"