


DIMENSIONS

HAB HORIZONTAL BELT DRIVE DIMENSIONS

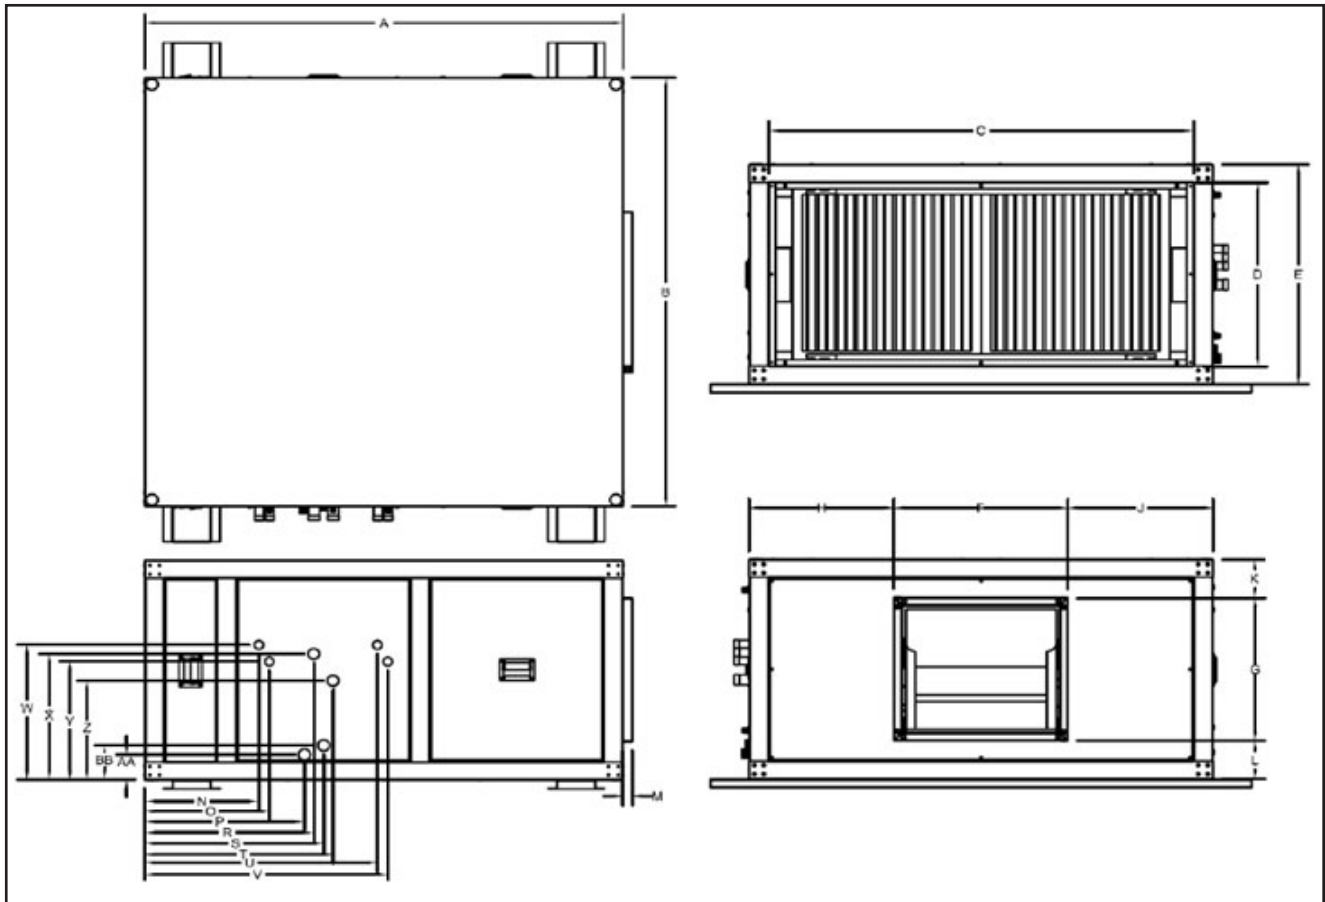

Dimensions - Sizes 08 thru 40

Unit	A	B	C	D	E	F	G	H	J	K	L	M	N
08	49.5	39.0	35.0	16.0	20.0	14.0	12.5	12.5	12.5	2.0	5.5	1.0	11.2
12	49.5	39.0	35.0	16.0	20.0	14.0	12.5	12.5	12.5	2.0	5.5	1.0	11.2
16	49.5	48.0	44.0	20.5	24.5	18.0	16.0	15.0	15.0	4.3	4.3	1.0	11.8
20	49.5	48.0	44.0	20.5	24.5	18.0	16.0	15.0	15.0	4.3	4.3	1.0	11.8
30	63.0	57.0	53.0	32.4	36.6	20.0	17.5	18.5	18.5	9.5	9.5	1.0	12.6
40	63.0	57.0	53.0	32.4	36.6	20.0	17.5	18.5	18.5	9.5	9.5	1.0	12.6


Unit	O	P	R	S	T	U	V	W	X	Y	Z	AA	BB
08	13.6	16.5	17.2	N/A	19.8	23.5	25.9	11.4	11.4	9.2	9.2	2.8	2.8
12	13.6	16.5	17.2	N/A	19.8	23.5	25.9	11.4	11.4	9.2	9.2	2.8	2.8
16	12.9	16.5	17.5	18.5	19.5	24.1	25.2	15.1	14.1	13.2	11.1	1.1	2.8
20	12.9	16.5	17.5	18.5	19.5	24.1	25.2	15.1	14.1	13.2	11.1	1.1	2.8
30	13.9	17.7	18.8	20.7	22.7	27.6	28.8	20.0	19.7	18.5	17.6	3.3	4.3
40	13.9	17.7	18.8	20.7	22.7	27.6	28.8	20.0	19.7	18.5	17.6	3.3	4.3

All dimensions are in inches

DIMENSIONS

HAB HORIZONTAL BELT DRIVE DIMENSIONS

Redefine your comfort zone™ | www.titus-hvac.com

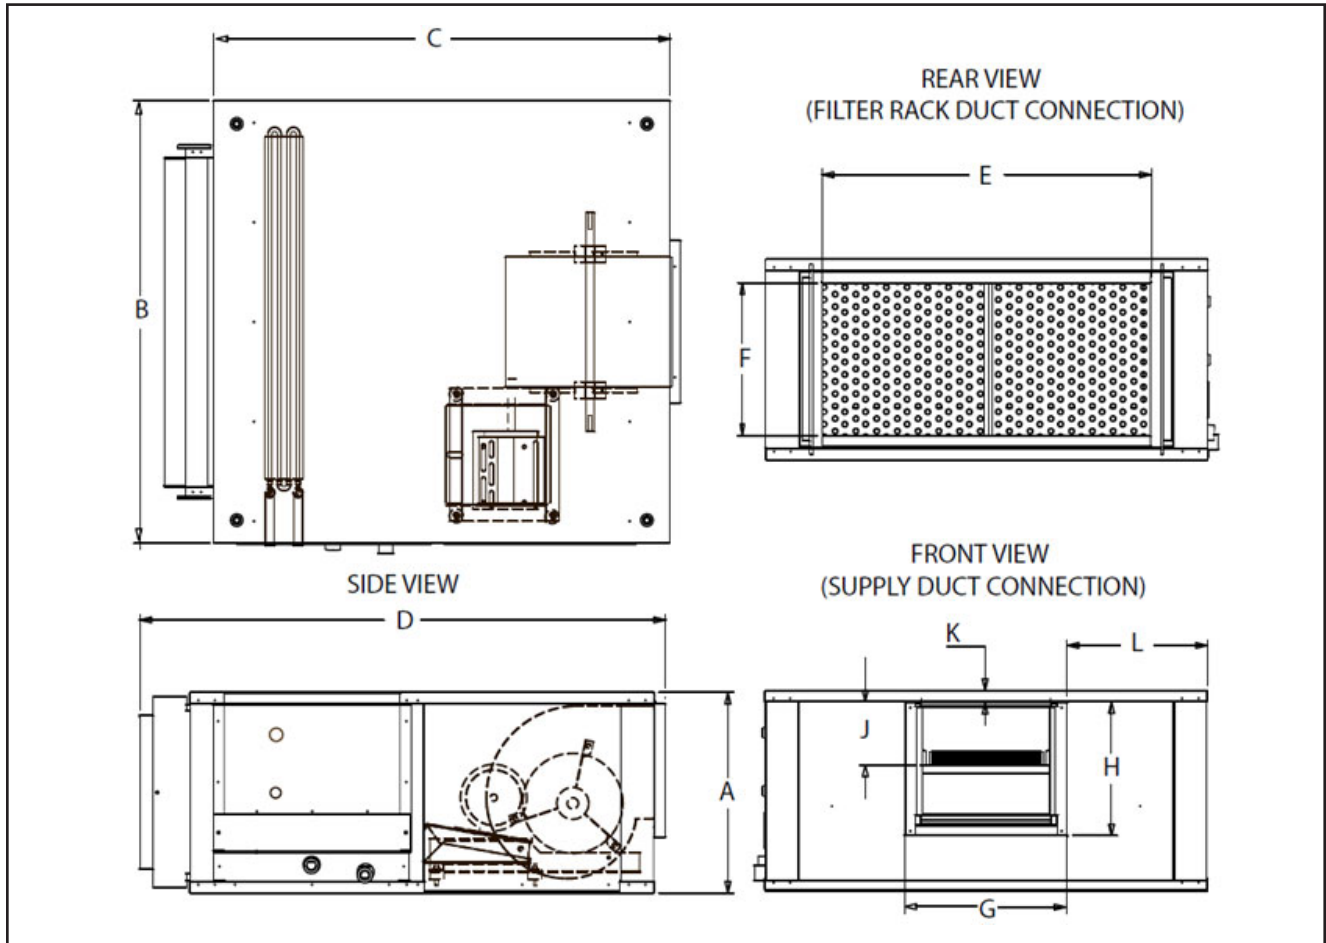

Dimensions - Sizes 60 thru 80											
Unit	A	B	C	D	E	F	G	H	J	K	L
60	47.0	72.0	57.5	63.0	59.8	42.7	22.7	19.7	12.2	4.9	24.6
80	47.0	72.0	57.5	63.0	59.8	42.7	22.7	19.7	12.2	4.9	24.6

