


Model: TMSA

Air Flow Measurements:

1. Place the probe in the four positions indicated in the diagram shown.
2. Record and average the four velocity readings.
3. Calculate the flow rate using the following equation.

Flow Rate: CFM = Factor x Average Velocity (FPM)

Note: Select and use the applicable factor from the following table.

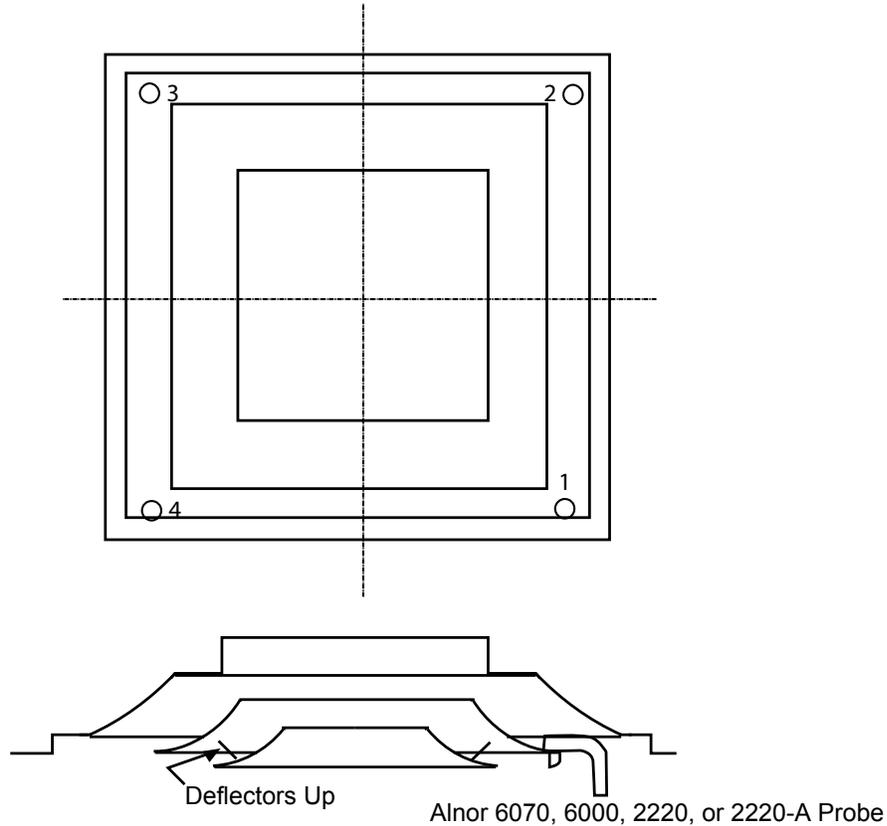

TMSA Air Flow Factors

12 x 12-inch Face	
Neck Diameter Size	Factor
4-inch	0.08
5-inch	0.12
6-inch	0.18
7-inch	0.21
8-inch	0.31

24 x 24-inch Face	
Neck Diameter Size	Factor
8-inch	0.31
10-inch	0.49
12-inch	0.71
14-inch	0.96
15-inch	1.1