
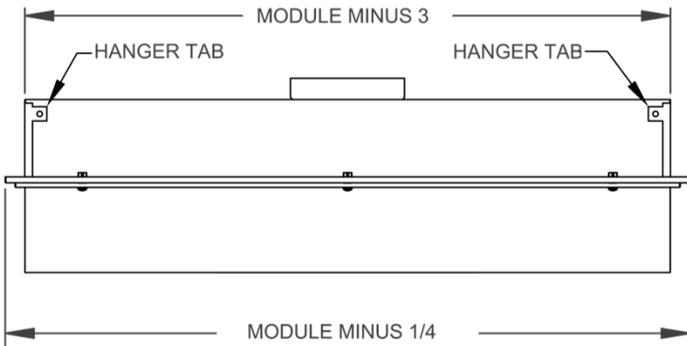
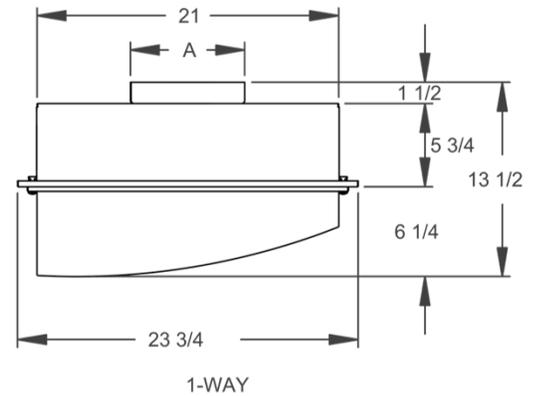
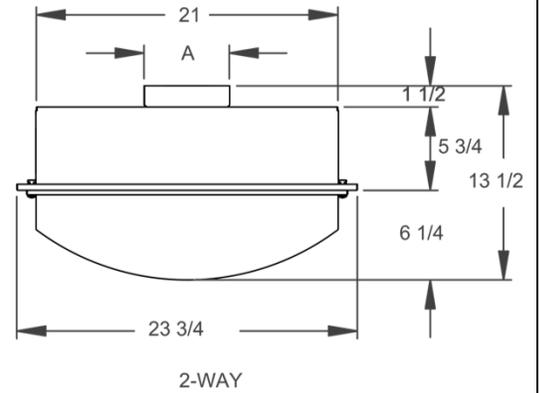


- RadiaTec-AL • Aluminum
- RadiaTec-SS • 304 Stainless Steel

Critical Environment Diffusion Products  
 High Volume • Low Velocity  
 Radial Air Diffusion





- RadiaTec without HEPA Filter Rack

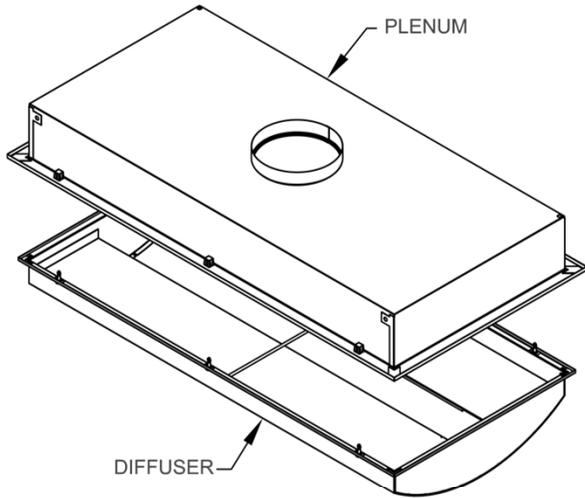

Dimensions		
Module Size	Nominal Inlet Size	A
<input type="checkbox"/> 24 x 24	8	7 <sup>7</sup> / <sub>8</sub>
<input type="checkbox"/> 24 x 24	10	9 <sup>7</sup> / <sub>8</sub>
<input type="checkbox"/> 48 x 24	10	9 <sup>7</sup> / <sub>8</sub>
<input type="checkbox"/> 48 x 24	12	11 <sup>7</sup> / <sub>8</sub>

Face and backpan shipped separately for field assembly.

☐ RadiaTec with HEPA Filter Rack

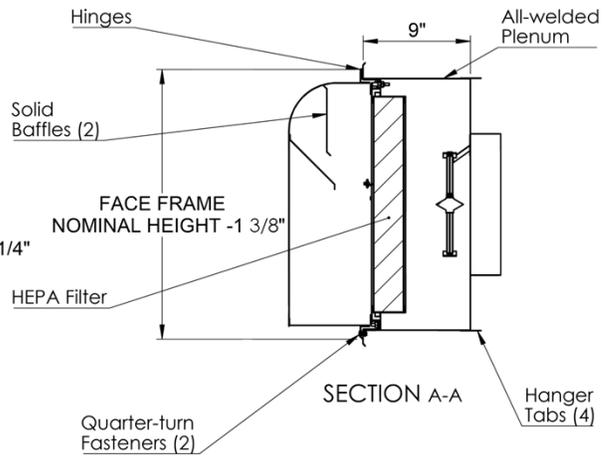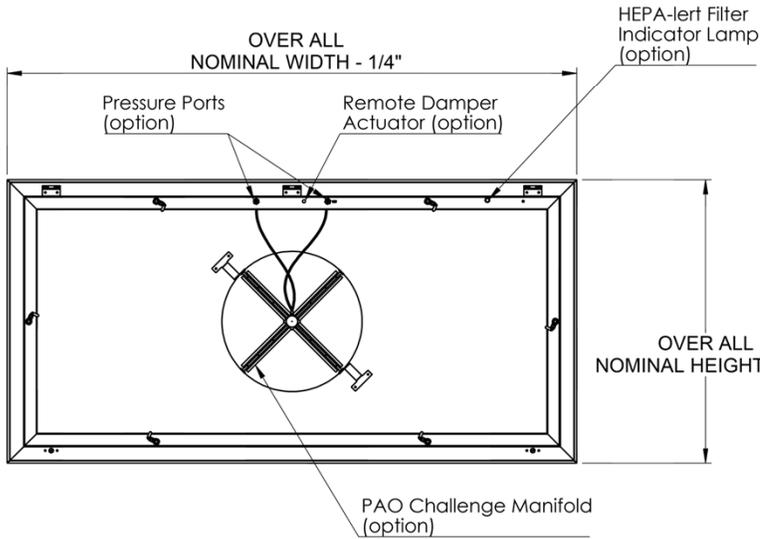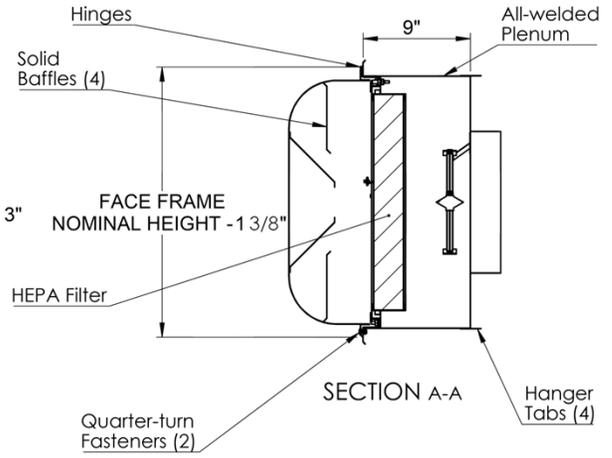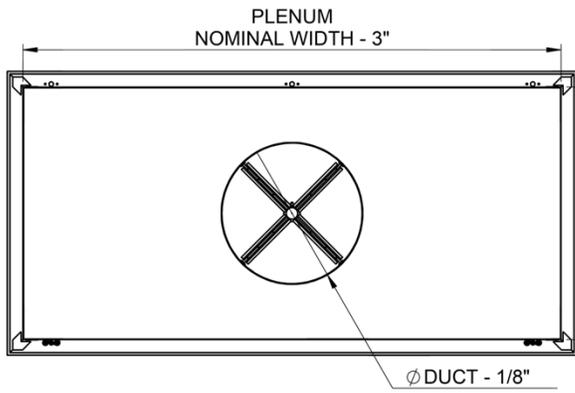


Dimensions		
Module Size	Nominal Inlet Size	A
☐ 24 x 24	8	7 <sup>7</sup> / <sub>8</sub>
☐ 24 x 24	10	9 <sup>7</sup> / <sub>8</sub>
☐ 48 x 24	10	9 <sup>7</sup> / <sub>8</sub>
☐ 48 x 24	12	11 <sup>7</sup> / <sub>8</sub>

Face and backpan shipped separately for field assembly. HEPA filter by others.



Hepa Filter Rack Knife Edge Dimensions

Module Size (inches)	Knife Edge Dimensions of HEPA Rack (inches)	
	Length	Width
24 x 24	17 3/8	17 3/8
48 x 24	41 3/8	17 3/8

HEPA Filter Retainment Detail

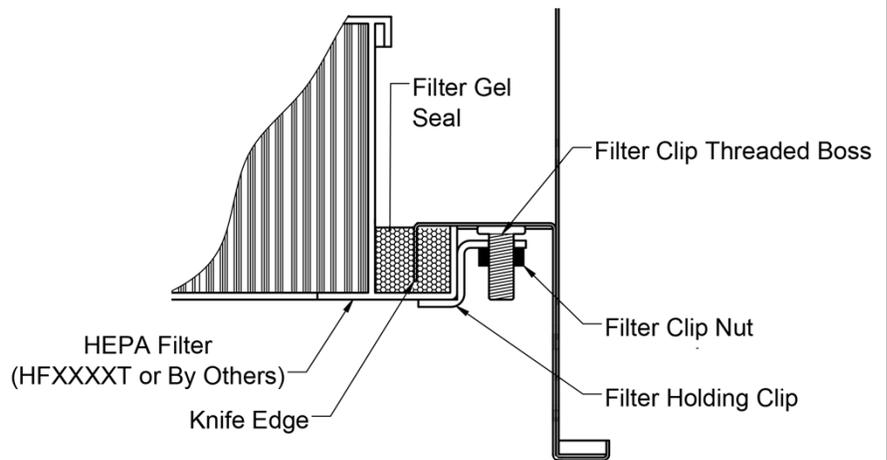

**Border Detail:**

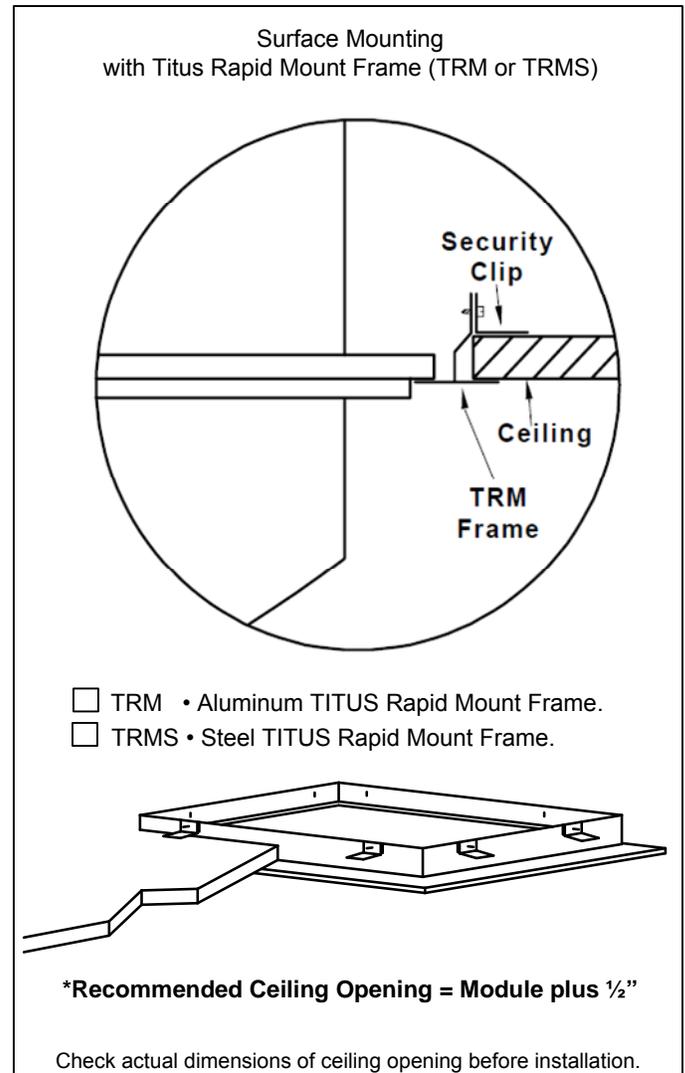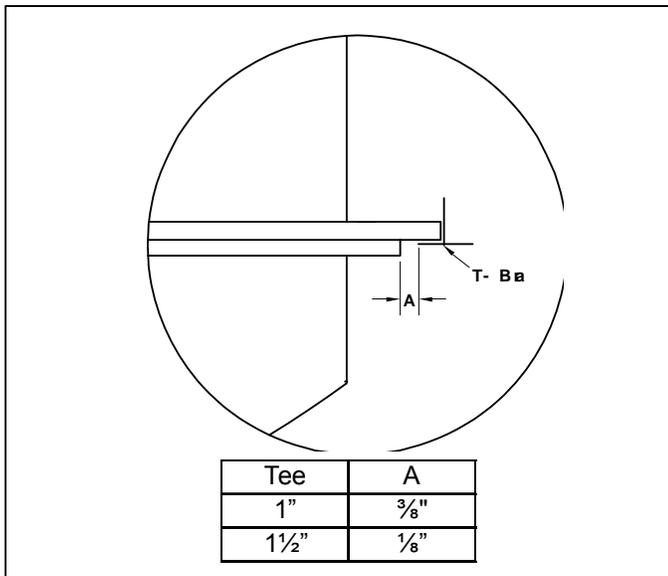

**Standard Finish:**

RadiaTec-AL • #26 White

RadiaTec-SS • 04 Mill

Other \_\_\_\_\_

**Accessories (Optional)**

Check  if provided.

Frame Gasket (FG)

Insulated Plenum (IP)

**General Description**

- Removable face for sanitizing, (no special tool required to remove the face). Face will hang to allow access without complete removal.
- Available in aluminum and 304 stainless steel. Face and backpan can be of different material.
- Available in 24" x 24" and 48" x 24" module sizes.
- 2-way or 1-way diffusion pattern.
- Plenum ships loose for field assembly. (Non-HEPA rack units only)
- Designed to lay into 1" and 1 1/2" T-Bar ceiling systems.
- Optional TRM/TRMS mounting frame available for surface mounting.
- Optional HEPA filter rack available. (HFXXXXT filter or by others)
- Great for use in fume hood areas.
- Optional Gasketing available to seal diffuser. Standard on HEPA models.
- Retainer cables prevent accidental dropping of perforated face after removal.