


## TLF-AA • Removable Face • Laminar Flow Ceiling Diffusers • Aluminum • Perforated Face

### Critical Environment Diffusion Products

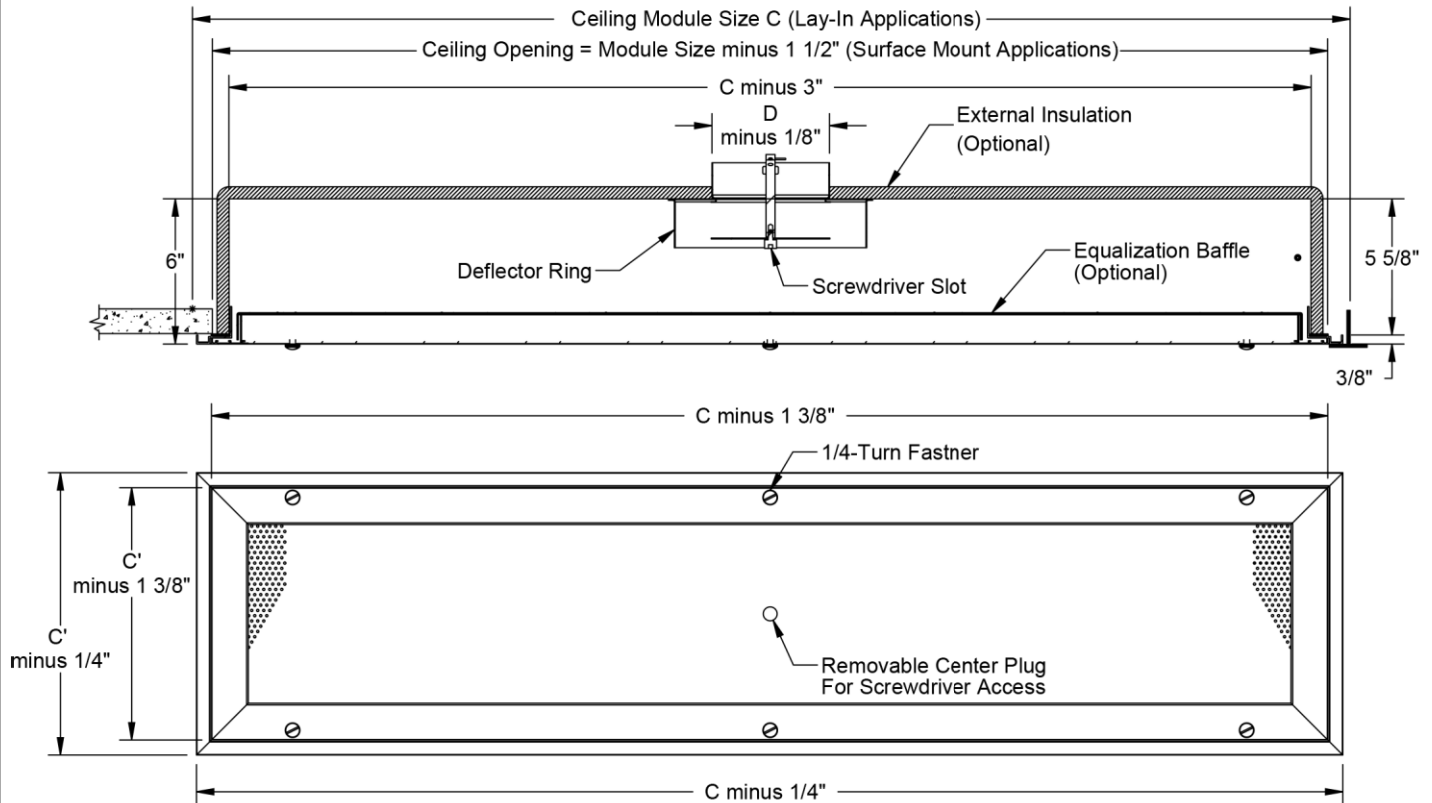

CEILING MODULE C X C'	DUCT SIZE D
24 x 12	5, 6, 7
24 x 24	5, 6, 7, 8, 10, 12
36 x 12	5, 6, 7
36 x 24	5, 6, 7, 8, 10, 12
48 x 12	5, 6, 7
48 x 24	5, 6, 7, 8, 10, 12
48 x 36	5, 6, 7, 8, 10, 12
60 x 12	5, 6, 7
60 x 24	5, 6, 7, 8, 10, 12
60 x 36	5, 6, 7, 8, 10, 12
72 x 12	5, 6, 7
72 x 24	5, 6, 7, 8, 10, 12
72 x 36	5, 6, 7, 8, 10, 12

DUCT SIZE D	NECK SIZE B
5, 6, 7, 8	2 1/4
10, 12	2 3/4

#### Note:

- Table indicates Available Ceiling Modules Sizes C x C' and Nominal Round Duct Sizes D.
- Dimensions are in inches.

**Accessories (Optional)** \_\_\_\_\_

Check ☒ if provided.

- ☐ Equalization Baffle
- ☐ Insulated Plenum (External)
- ☐ MRI Compatible Construction

**General Description** \_\_\_\_\_

- Model TLF-AA laminar flow diffuser generates a low velocity, evenly distributed, downward moving "piston" of conditioned air.
  - Installed over the operating table in a hospital operating room, Model TLF-AA helps to protect the patient from contaminated air. The only appreciable amount of room air entrainment occurs at the boundaries of the moving air mass outside the confines of the operating table. As a result, the patient is effectively isolated from residual room air.
- Model TLF-AA is especially effective in cooling areas with heavy, localized, internal loads, as in the computer room. The column of air delivered by the Model TLF-AA cools the load source directly without generating high velocities in the occupied space.
  - Trim disc within perforated deflector ring allows minor equalization adjustment and is accessed by removing center plug.
  - Perforated face is quickly removed by loosening ¼ turn fasteners.
- Retainer cables prevent accidental dropping of perforated face after removal.
  - Internal baffles distribute air evenly over perforated face.
  - 13% free area perforated face has 3/32" diameter holes on ¼" centers on 60° staggered pattern.
  - Can be surfaced mounted (left side of drawing above) or laid into conventional T-bar ceiling system (right side of drawing above).
  - Compatible with 1" or 1½" T-bar ceiling grids.