

DVCP Duct Cover – Parts List

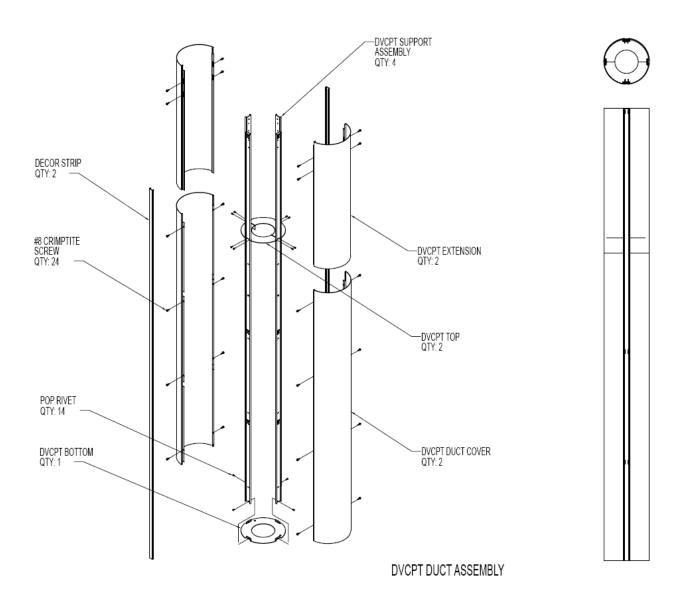






Figure: 1 Mount the duct cover bottom on the top of the unit.




FIGURE 1



Figure: 2 Mount the duct cover support assembly on the top of the unit. Align the holes on the flange of the duct cover bottom and the duct cover support assembly and cut the support according to the ceiling height keeping 0-2" distance between the ceiling and the top of the duct covert support assembly. Align the duct cover top with the three holes on the support assembly and rivet the duct cover top with the duct cover support assembly in 2 places.

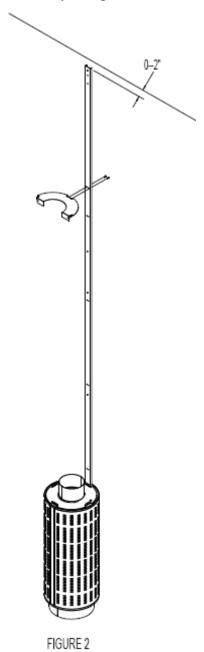




Figure: 3 Install the duct onto the unit. Install the second duct cover top to the duct cover support assembly enclosing the duct. Assemble both the duct cover top together using pop rivets.






Figure: 4 Assemble all four duct cover support assemblies to the duct cover bottom using pop rivets.




FIGURE 4



Figure: 5 Align the top edge of the duct cover support assembly with the top face of the extension and install the extension assembly onto the duct cover support assembly using screws. (Décor strip of the unit should align with the décor strip of the duct cover assembly)







Figure: 6 Place the duct cover on the top of the unit and assemble it to the duct cover support assembly using screws. Snap the décor strips into the springs of the duct cover support assemblies.



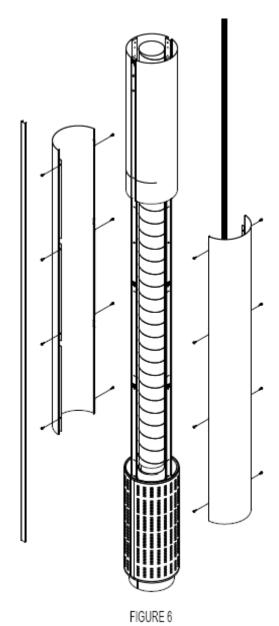

DVVC Duct Cover – Parts List

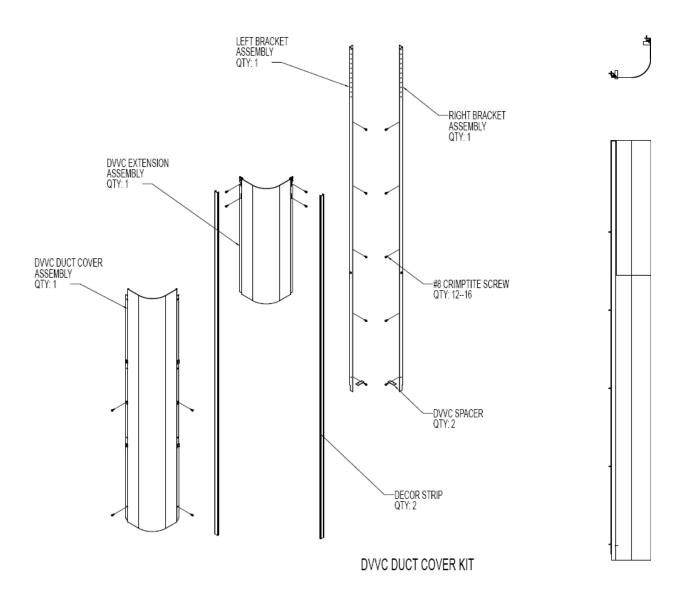




Figure: 1 Cut the brackets according to the ceiling height keeping 0-2" distance between the ceiling and top of the bracket.

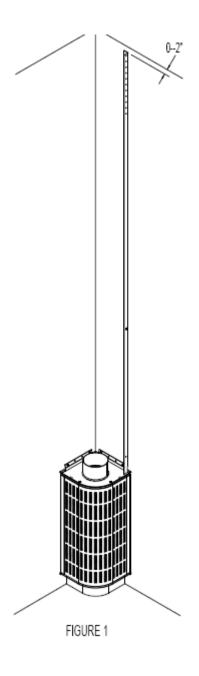




Figure: 2 Using spacers align the brackets to the end of the unit keeping 0.67" distance from the end face of the unit. Screw the left and right brackets to the wall.

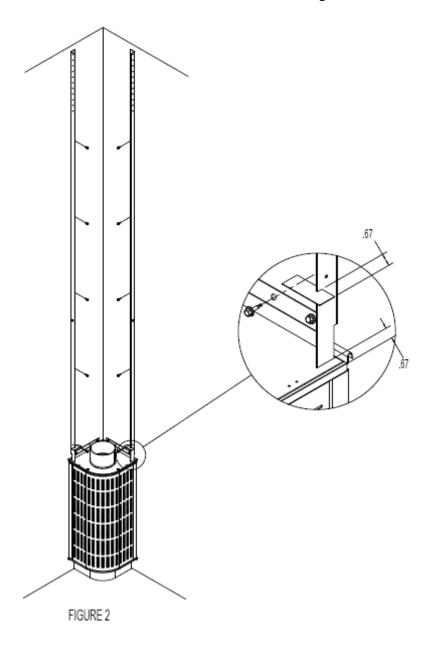




Figure: 3 Install the duct onto the unit. Align the top edge of the brackets with the top face of the extension and install the extension assembly onto the brackets using screws.


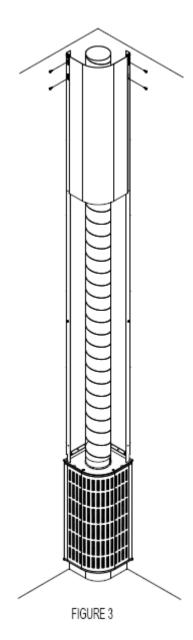




Figure: 4 Place the duct cover assembly on the top of the unit and assemble it to the brackets using screws. Snap the décor strips into the springs of the extension and duct cover assemblies.



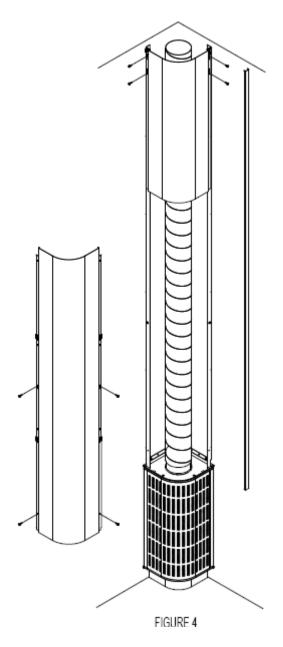

DVHC Duct Cover – Parts List

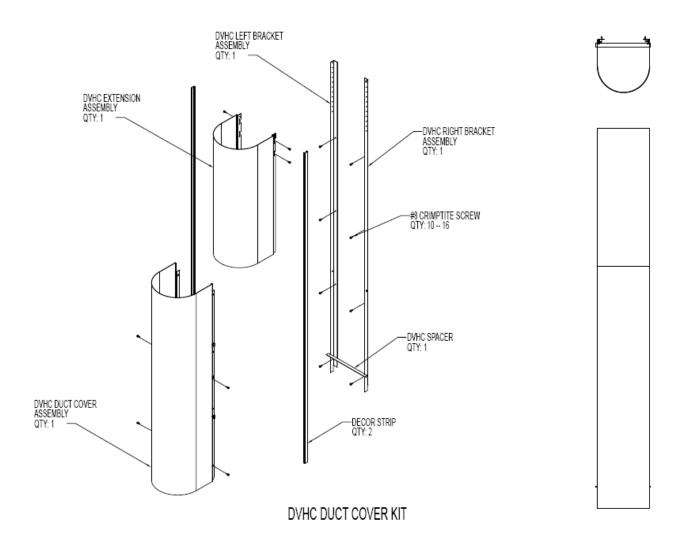




Figure: 1 Cut the brackets according to the ceiling height keeping 0-2" distance between the ceiling and top of the bracket.

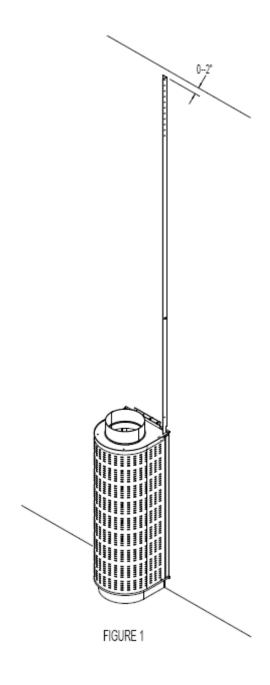




Figure: 2 Using spacers align the brackets to the end of the unit keeping 0.67" distance from the end face of the unit. Screw the left and right brackets to the wall.

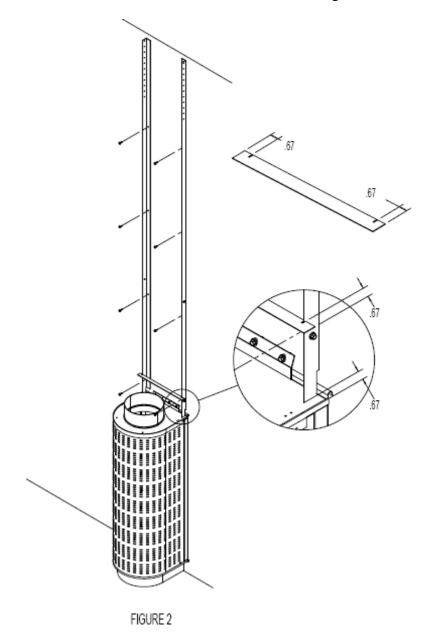




Figure: 3 Install the duct onto the unit. Align the top edge of the brackets with the top face of the extension and install the extension assembly onto the brackets using screws.


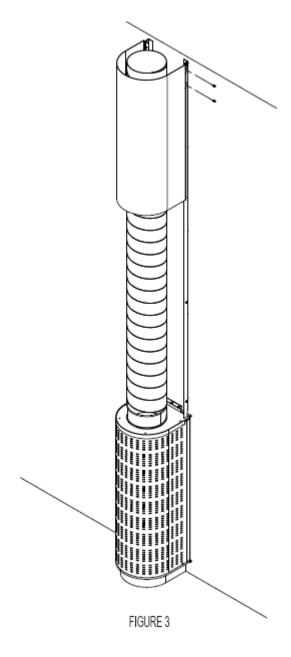




Figure: 4 Place the duct cover assembly on the top of the unit and assemble it to the brackets using screws. Snap the décor strips into the springs of the extension and duct cover assemblies.





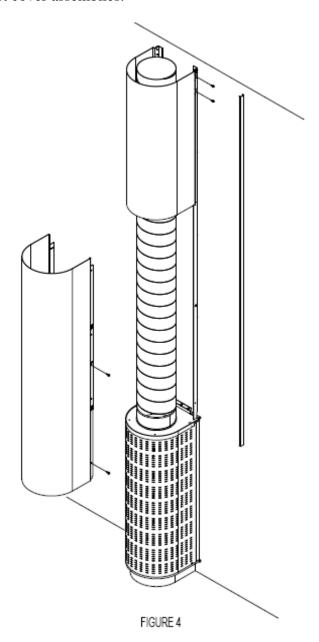

DVBC Duct Cover – Parts List (For Size 12-36)

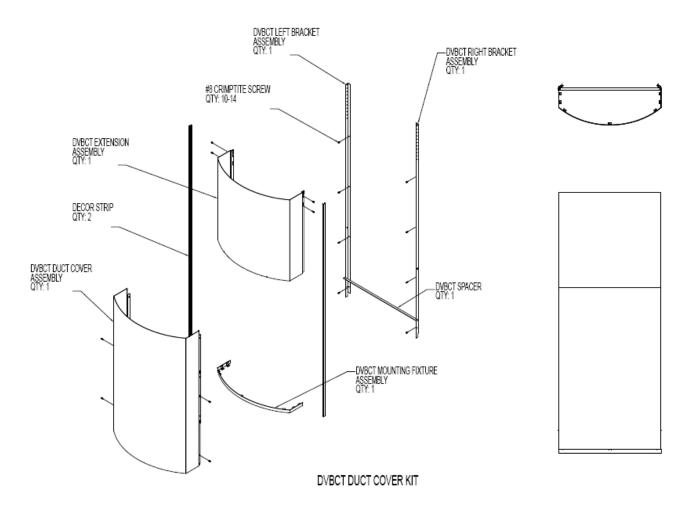




Figure: 1 Cut the brackets according to the ceiling height keeping 0-2" distance between the ceiling and top of the bracket.

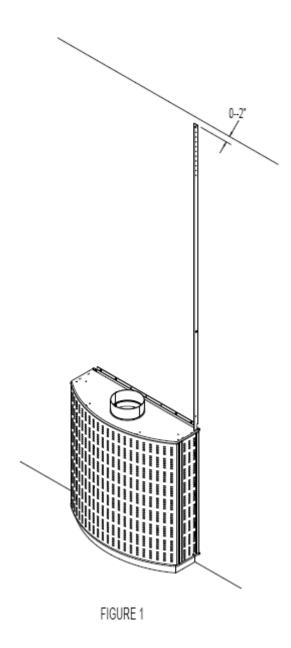




Figure: 2 Using spacers align the brackets to the end of the unit keeping 0.67" distance from the end face of the unit. Screw the left and right brackets to the wall.

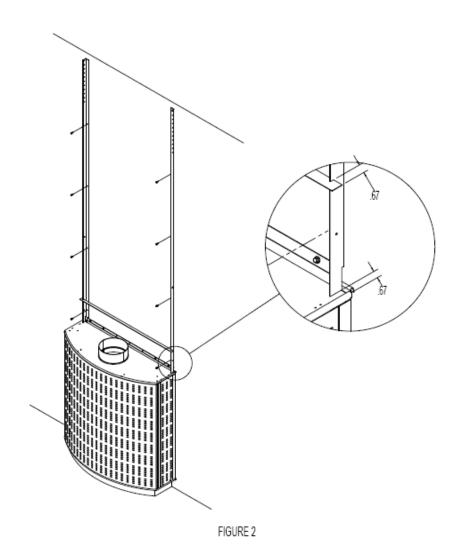




Figure: 3 Install the duct onto the unit. Align the top edge of the brackets with the top face of the extension and install the extension assembly onto the brackets using screws.

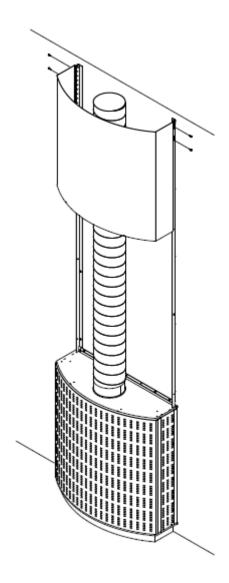


FIGURE 3



Figure: 4 Mount the mounting fixture assembly on the top of the unit.

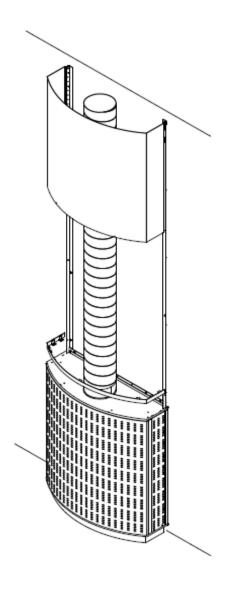


FIGURE 4



Figure: 5 Slide the duct cover in-between the mounting strip and the aluminum strip and assemble it to the brackets using screws. Snap the décor strips into the springs of the extension and duct cover assemblies.

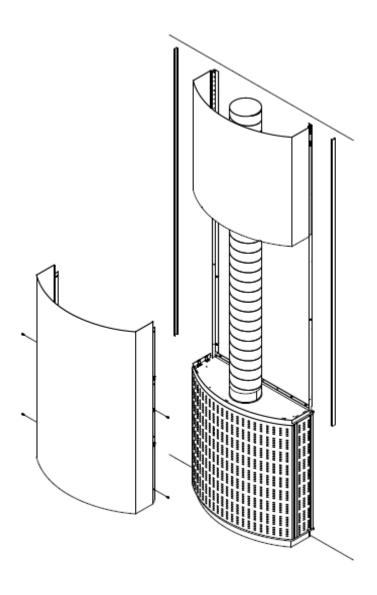


FIGURE 5

DVIRT

Installation

Figure: 1 Slide the duct cover assembly onto the inlet-plenum assembly to hold it in place.