


CHILLED BEAMS

INSTALLATION, OPERATION
& MAINTENANCE MANUAL

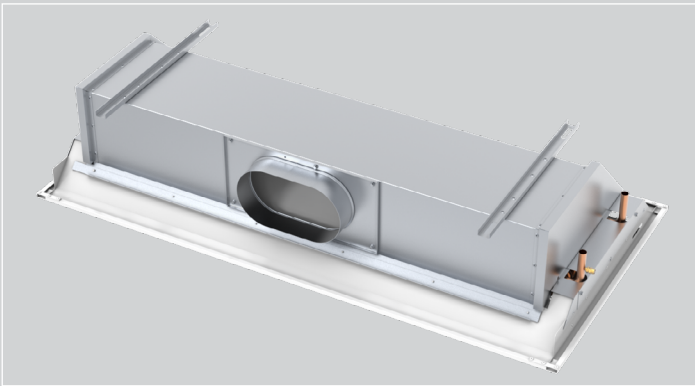

CBAL2 / CBLV-12 / CBAM

CBAL2



TABLE OF CONTENTS

CRITICAL OPERATIONS 3

HANDLING WARNINGS 4

INSTALLATION INSTRUCTIONS 5

MOUNTING HEIGHT GUIDELINES 5

CEILING INTEGRATION. 6

SUSPENSION REQUIREMENTS 7

INLET/OUTLET AND COIL CONNECTION CONFIGURATIONS. 9

BALANCING GUIDELINES 10

MAINTENANCE. 11

LINT SCREEN REMOVAL 13

DIMENSIONS & WEIGHTS 15

HOSE INSTALLATION. 18


CONSTANT FLOW REGULATOR INSTALLATION 19

MANUFACTURING TAG DETAIL 20

CRITICAL OPERATIONS


To ensure optimal system performance and consistent thermal comfort for room occupants, connect Linear Active Chilled Beams in a parallel configuration to the building's water distribution system. This setup ensures each beam receives water at the same entering temperature.

For improved serviceability and flexibility, install isolation valves on both the supply and return lines of each individual beam.

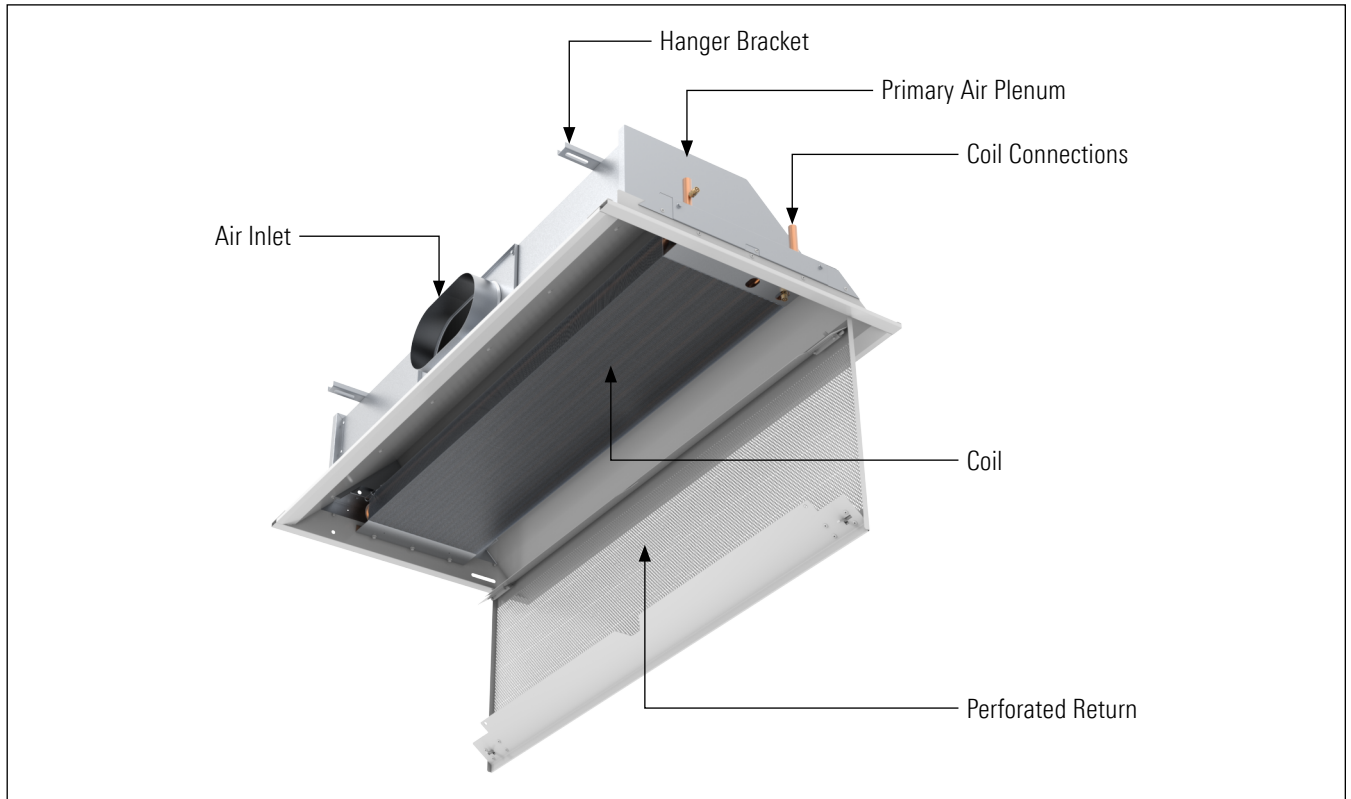

HANDLING WARNINGS

1. Team Lift Required
 - A minimum of two (2) people is required for safe handling and installation.
2. Safety Cable
 - Each Titus chilled beam is equipped with two factory-installed safety cables—refer to drawing below for proper usage.

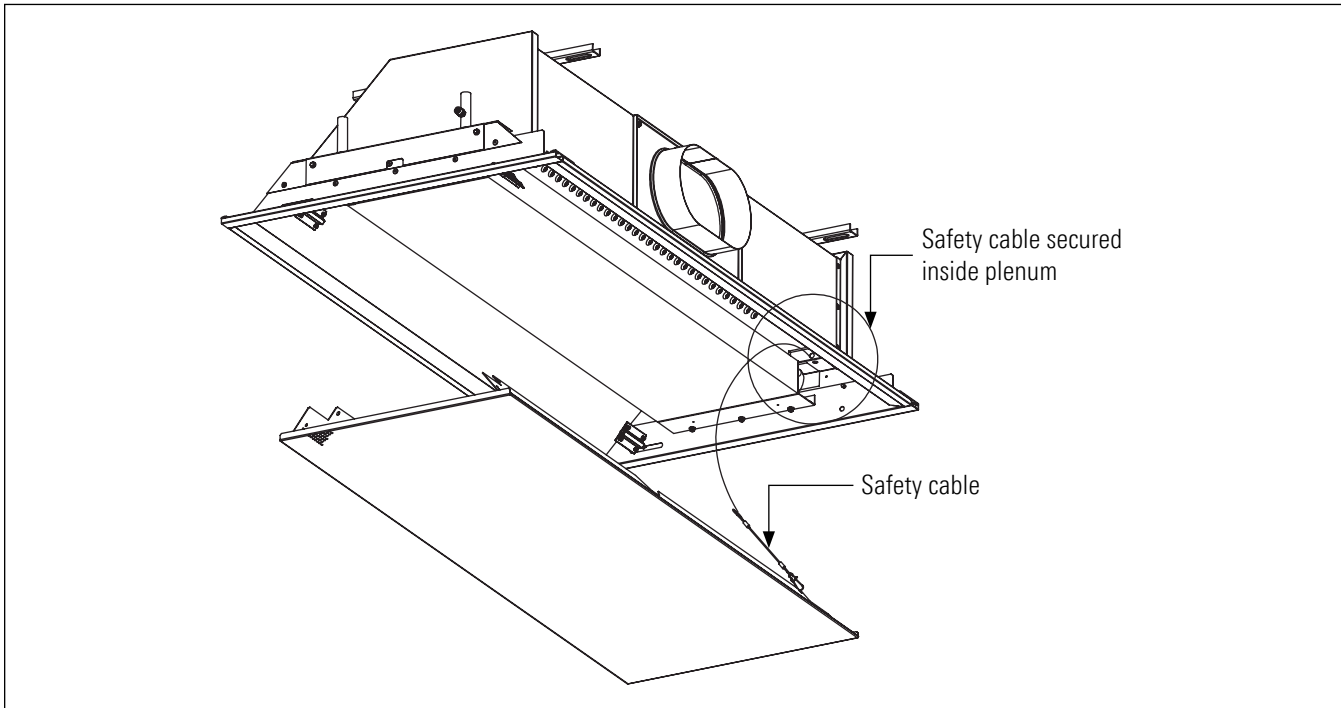


3. Storage
 - Store beams in their original packaging in a dry, sheltered location until ready for installation.
4. Protective Film
 - Leave the protective film on the beam face during construction to prevent dust or debris from causing damage. Remove only after the workspace is clean.
5. Code Compliance
 - All installations must comply with local codes and regulations.
6. Pre-Installation Checklist
 - Before beginning, gather all required tools and materials, including:
 - Isolation valves
 - Threaded rods
 - Suspension cables or hanging wire
 - Unistrut
 - Flexible duct
 - Surface-mount frames (if required)

INSTALLATION INSTRUCTIONS


CBAL2 and CBLV12 models ship with a loose top inlet neck.

1. Secure the inlet neck to the top of the unit using six (6) #8 sheet metal screws (not included).
2. Seal all joints to prevent air leakage.
3. Connect the inlet collar to the main duct using flexible duct and sheet metal screws. Ensure airtight connections.

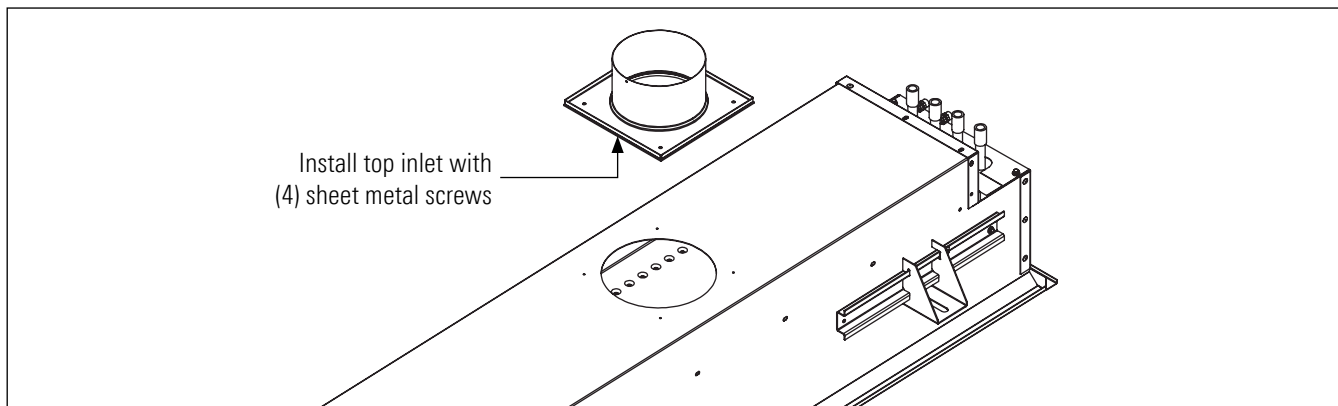

Multi-Inlet Installation Procedure (Model: CBAL2 with MI Inlet Configuration Selected)

1. Pre-Installation Check
 - The unit is shipped with both top and side inlet cutouts. The side inlet is pre-installed at the factory, and a blank-off plate is installed on the top inlet.
 - Verify that all components have been received and are in good condition.
2. Conversion to Top Inlet Configuration
 - Remove the six (6) sheet metal screws securing the side inlet, and the six (6) screws securing the top blank-off plate located on the plenum.
 - Position the blank-off plate over the side inlet cutout with the gasket side facing the beam. Secure it using six (6) sheet metal screws.
 - Install the inlet onto the top plenum opening and fasten it securely to the beam.

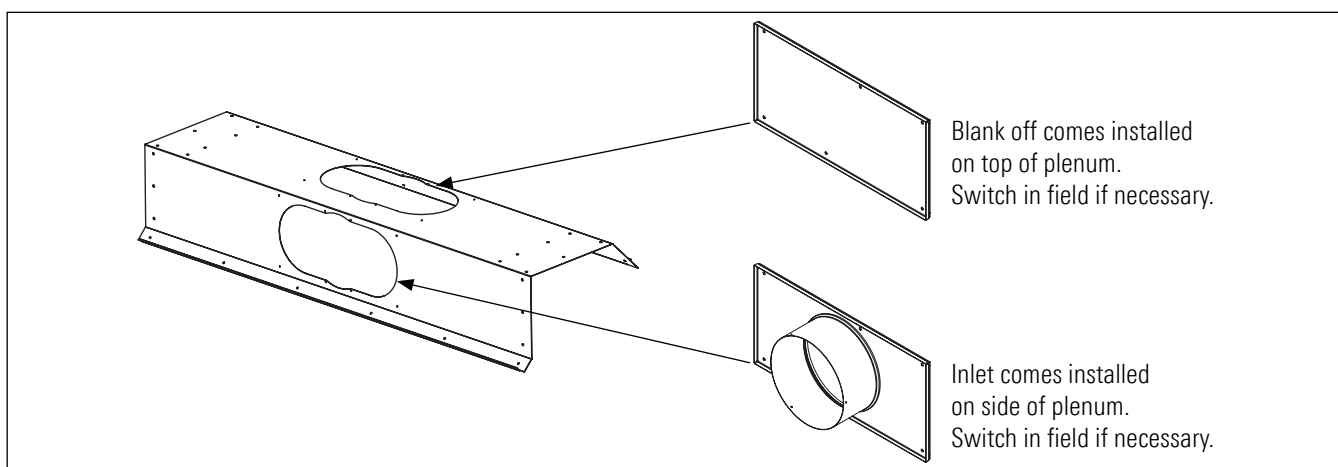


MOUNTING HEIGHT GUIDELINES

1. For both heating and cooling, install chilled beams at a maximum height of 14 feet above finished floor (AFF).
2. For cooling-only applications, beams may be installed up to 20 feet AFF.
3. Installations above these heights may reduce performance in the occupied zone.


CEILING INTEGRATION

Linear Active Chilled Beams are designed for easy integration into various ceiling types:

1. Suspended Grid Ceilings (lay-in or NT)
2. Drywall Ceilings
3. Exposed Installations

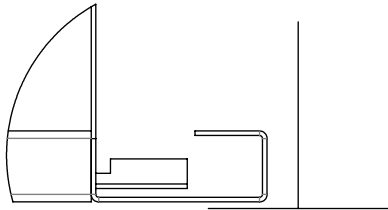

LAY-IN BORDER TYPE

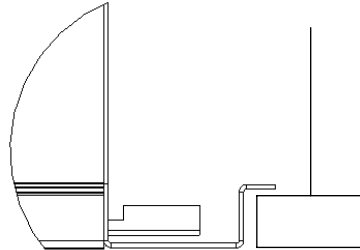

NT BORDER TYPE




INSTALLATION IN SUSPENDED CEILING GRID SYSTEMS

SUSPENSION REQUIREMENTS

CBAL2 / CBE2-24 Mounting Rails

1. CBAL2 / CBE2-24 (up to 7 ft): Two (2) mounting brackets
2. CBAL2 / CBE2-24 (over 7 ft): Four (4) mounting brackets

CBAL2 8FT TOP/SIDE INLET CONFIGURATION SHOWN

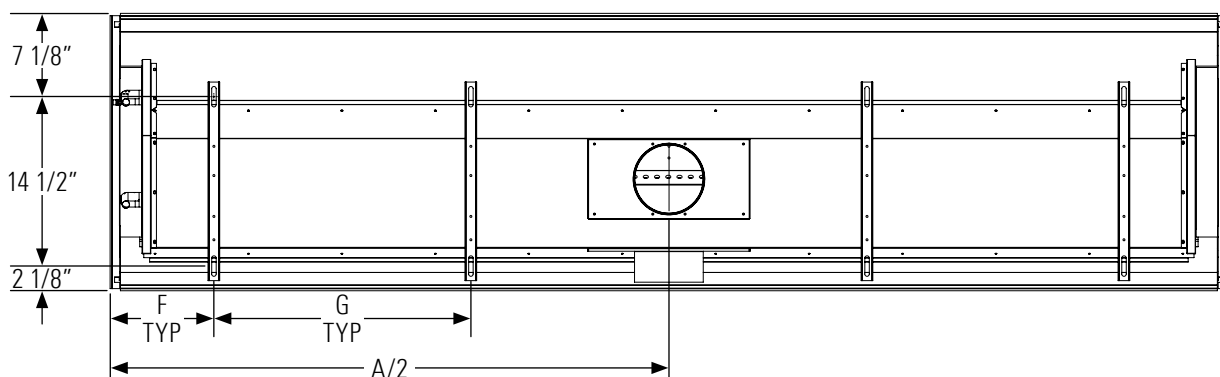


HANGER RAIL SLOT DIMENSIONS: 3/8" X 1-3/4"

Nominal Length	F	G
2 Ft	4 1/2	None
3 Ft	4 7/8	None
4 Ft	6 7/8	None
5 Ft	8 7/8	None
6 Ft	8 7/8	None
7 Ft	8 7/8	None
8 Ft	8 7/8	22
9 Ft	8 7/8	25
10 Ft	8 7/8	30

SUSPENSION REQUIREMENTS

CBAM / CBLV-12 / CBE2-12 Mounting Rails

3. CBLV12 / CBE2-12 (up to 7 ft): Four (4) mounting rails
4. CBLV12 / CBE2-12 (over 7 ft): Eight (8) mounting rails
5. CBAM: Always includes four (4) mounting rails

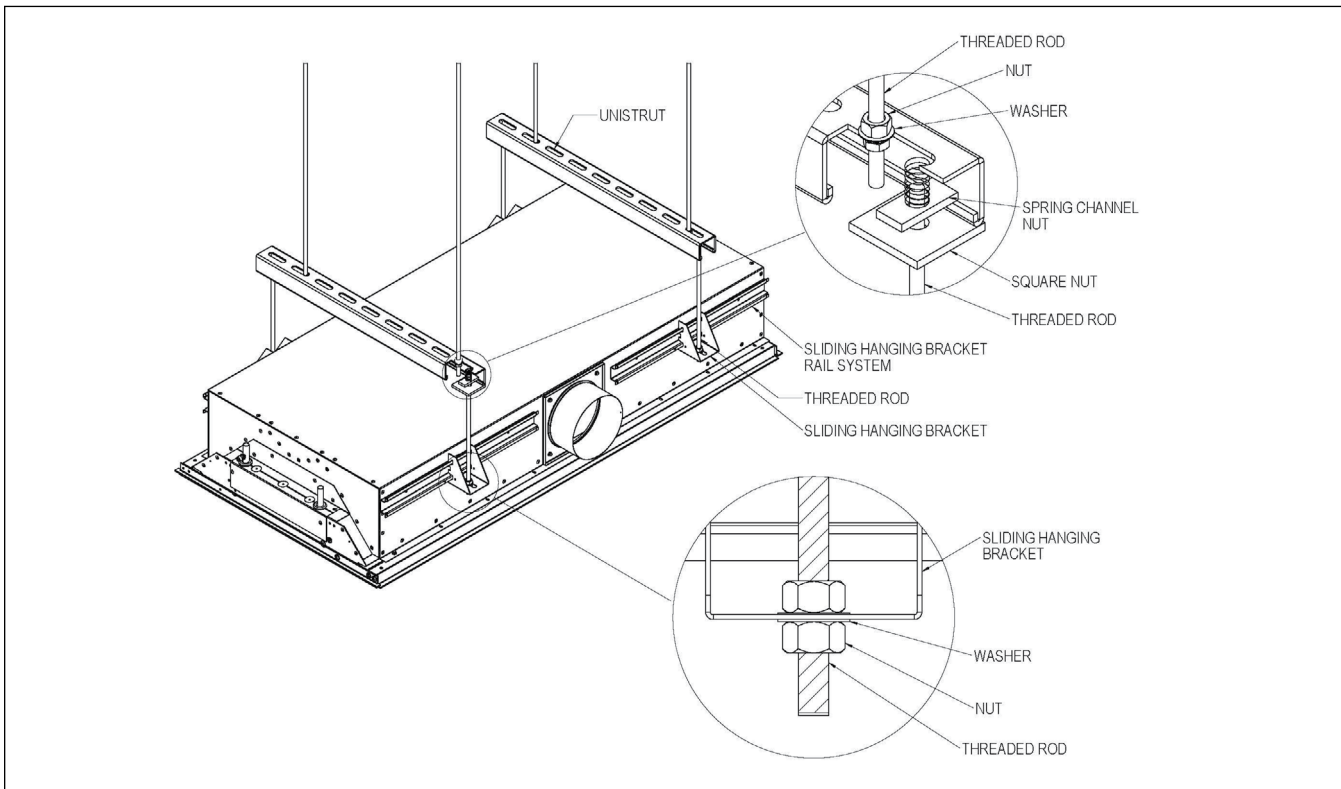


Mount the beam using mounting brackets, and threaded rod or hanging wire (not included). After securing to the ceiling, level the beam and verify orientation for piping and inlet placement. (This applies to all chilled beams, both mounting rail sections above).



INLET/OUTLET AND COIL CONNECTION CONFIGURATIONS


Determining Unit Handing:

1. Side Inlet: Stand facing the primary airflow inlet. The side with the coil connections determines the unit handing. Note that a 1-way discharge unit's position can be either toward you or away from you.
2. Top Inlet: Stand in front of the discharge airflow. The side with the coil connections determines the unit handing.

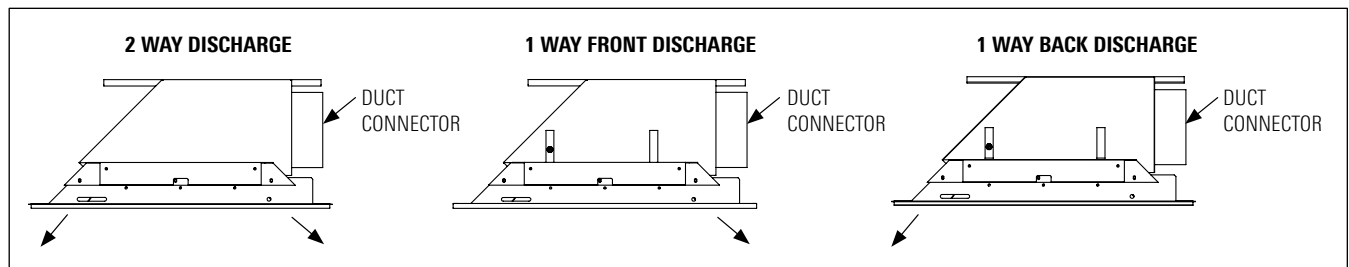



Piping Configuration:

1. For top inlet with 2-way discharge, the piping connection can be set up from either end. The side selected will change the final layout—refer to engineering drawings for coil connection, inlet, and discharge configuration options.

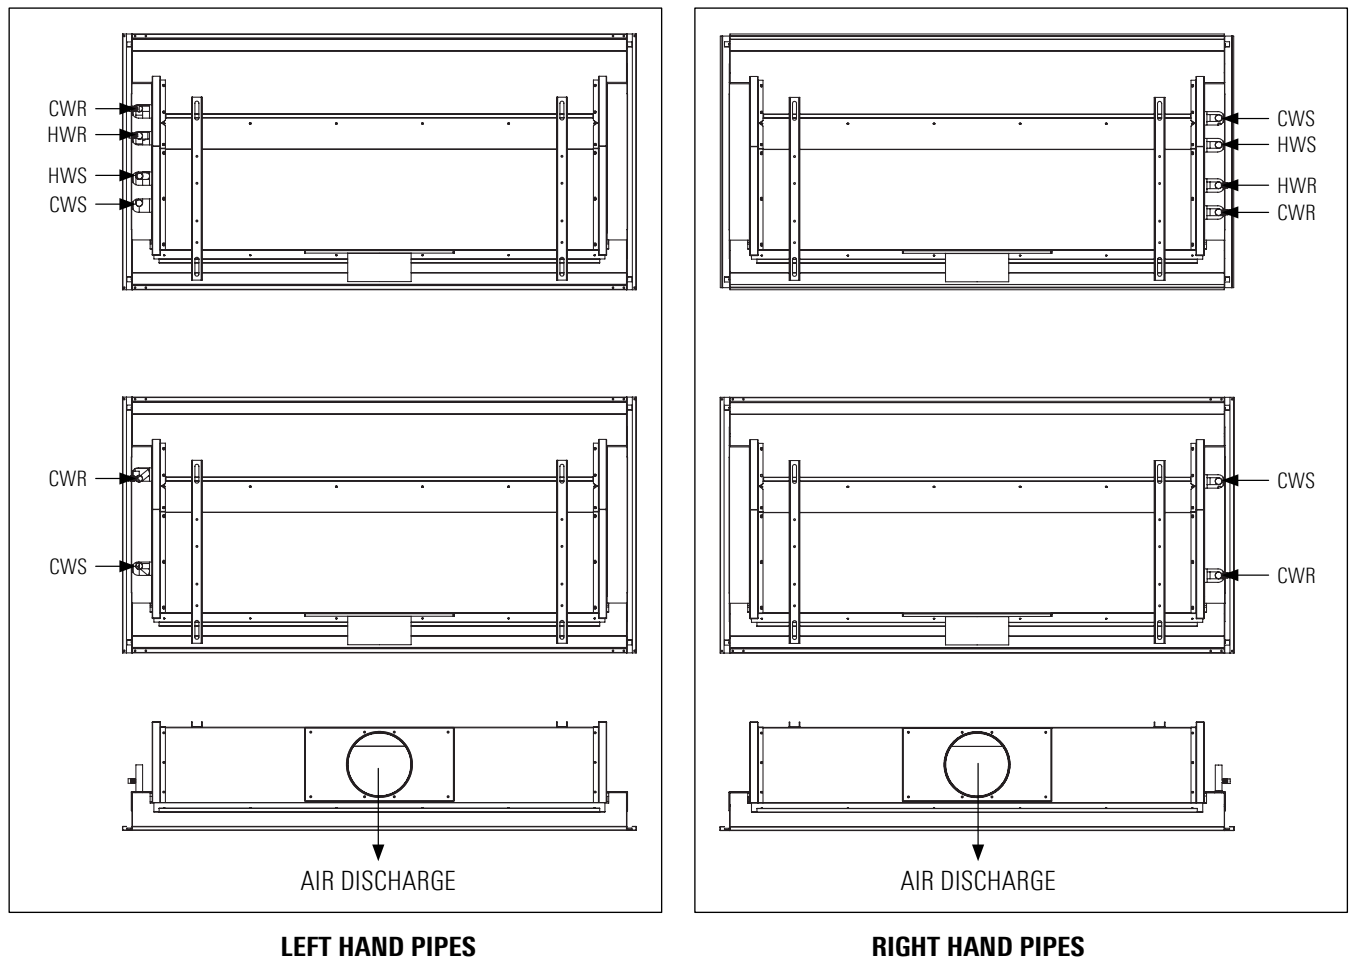

BALANCING GUIDELINES

1. Once installed, connect and secure any isolation or balancing valves.
2. Refer to unit labels to identify supply and return lines.
3. Test water flow rates and inspect for leaks. Flush the system as needed to remove contaminants.

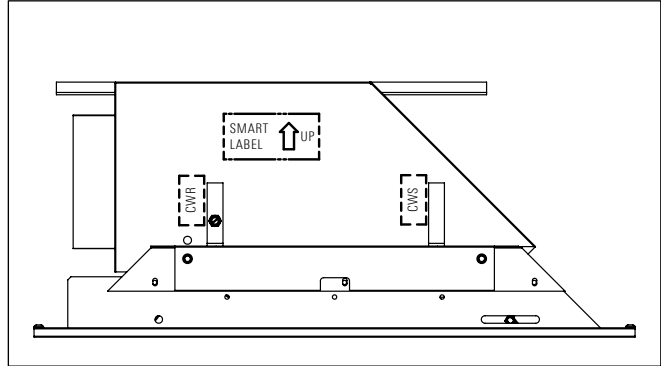
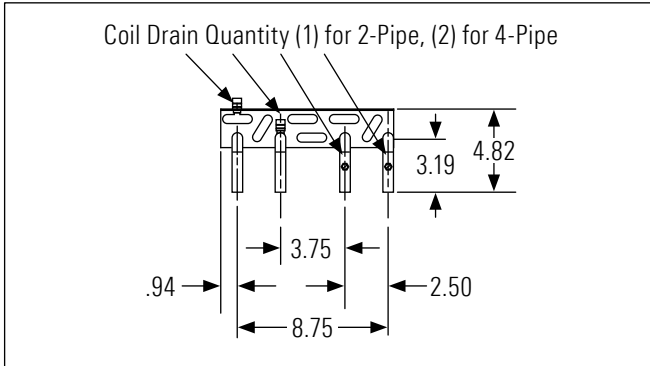


Water System Input	
Chilled (Water)	½" or ¾" NPT, Threaded or Sweat
Hot (Water)	½" or ¾" NPT, Threaded or Sweat

4. Attach the inlet collar to the primary air source. Avoid sharp duct bends near the inlet. Seal all duct connections thoroughly.
5. Measure plenum static pressure using the factory-installed pressure port.
 - Remove port plug.
 - Insert a calibrated manometer (not included).
 - Use published commissioning charts for performance reference.

Model	Top	Side	Multi-Inlet
CBAL2/CBE2-24	Ø4, Ø5, Ø6, OVAL8, 10	Ø4, Ø5, Ø6, OVAL8, 10	Ø4, Ø5, Ø6, OVAL8, 10
CBAM	Ø4, Ø5, Ø6, Ø8	Ø4, Ø5, Ø6, Ø8	
CBLV-12/CBE2-12	Ø4, Ø5, Ø6, OVAL8, 10	Ø4, Ø5, Ø6, OVAL8, 10	

Note: Constant Flow Regulator ordered separately, model TCFR

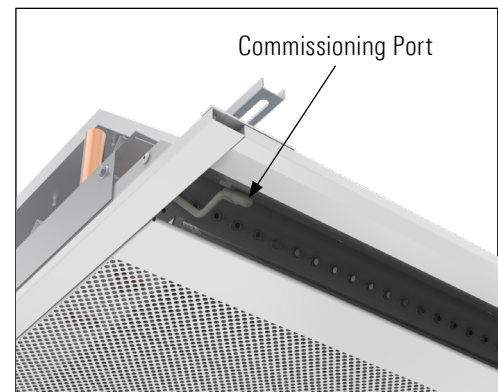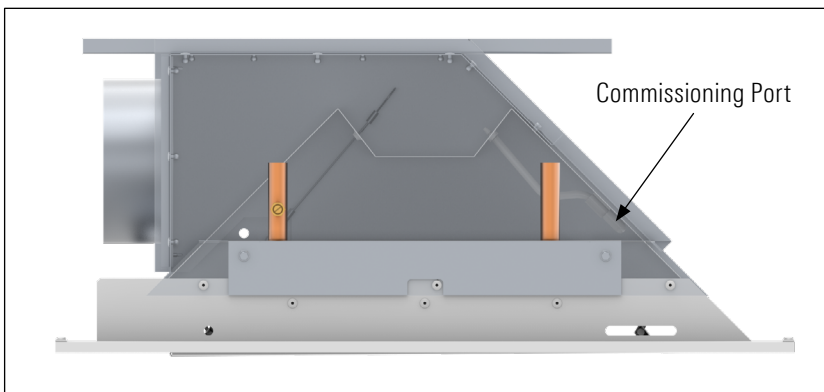

MAINTENANCE

Titus chilled beams contain no moving parts, reducing ongoing maintenance. The primary task is cleaning the water coil.

Coil Cleaning Procedure:


1. Release the spring-loaded pin latches.
2. Fold the grille fully down for access.
3. Clean using a vacuum with soft brush attachment. Do not use abrasive agents—they may damage the coil surface or painted finish.
4. Inspect the suspension system and brazed copper joints for damage or leaks.
5. After cleaning, return the grille to its original position and engage all safety locks.



MAINTENANCE


Coil Removal Procedure

1. Remove the Face Panel
 - Detach the face panel to access the internal components.
2. Detach Coil Covers
 - Remove the coil covers on each side by loosening the two (2) screws. This step provides clearance for coil vent access.
3. Remove Saddle Support (for units 8 ft or longer)
 - On units measuring 8 feet or longer, remove the saddle support by unscrewing the two (2) securing screws.
4. Detach the Coil from the Support Bracket
 - Gloves required to handle sharp fins.
 - Remove the three (3) screws on each side securing the coil to the coil support bracket. Carefully extract the coil from the unit.
5. Utilize the Symmetrical Coil Feature (If Needed)
 - The coil's symmetrical design allows it to be flipped in the field if required. Note that flipping the coil also necessitates flipping the coil covers upon reinstallation.
6. Reinstall Components
 - Securely replace the coil, coil covers, and face panel in the reverse order of removal.

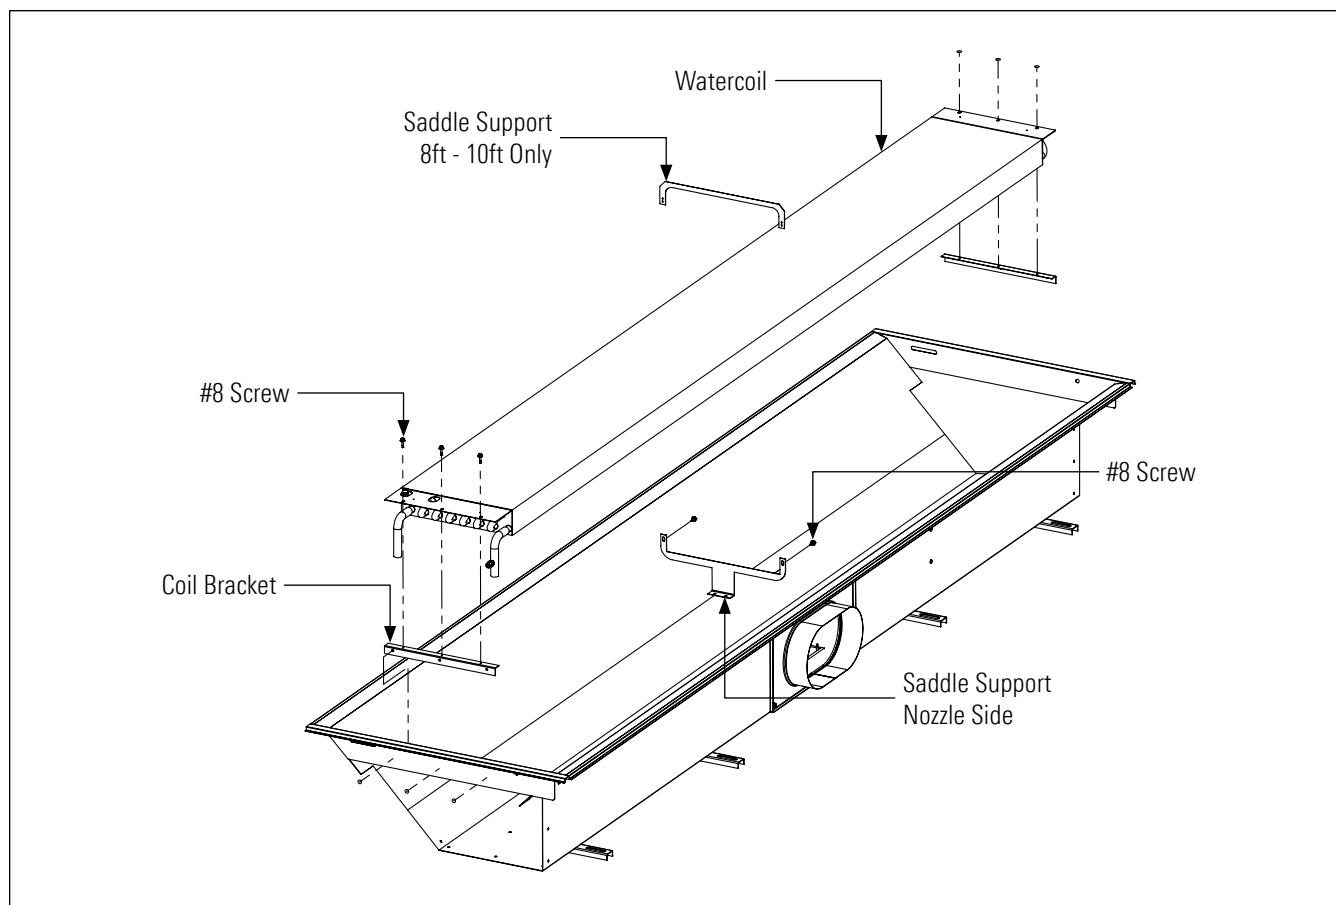


LINT SCREEN REMOVAL

1. CBAL2: Remove face panel, then remove four (4) sheet metal screws securing the lint screen to the coil plate.

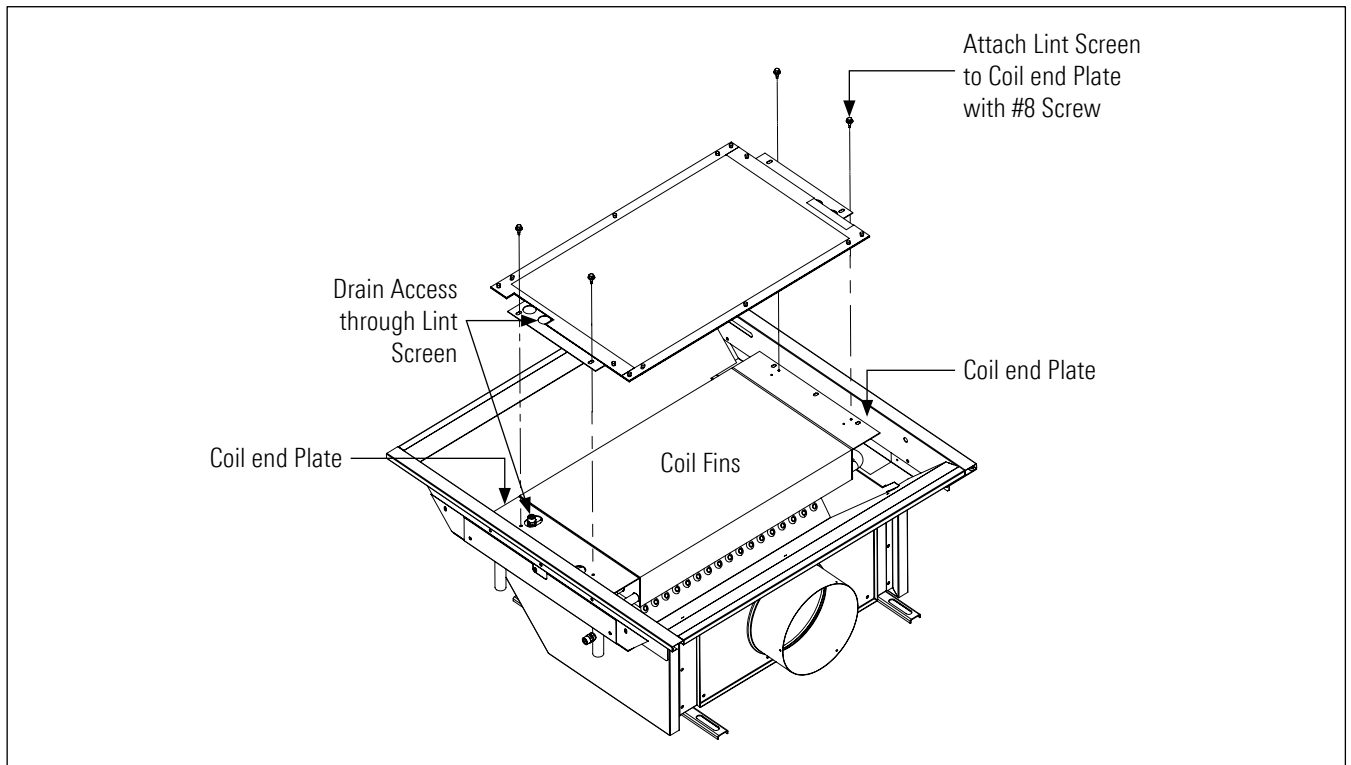


2. CBAM: Remove both the face and lint screen. Remove four (4) sheet metal screws attaching the lint screen to the perforated return assembly.

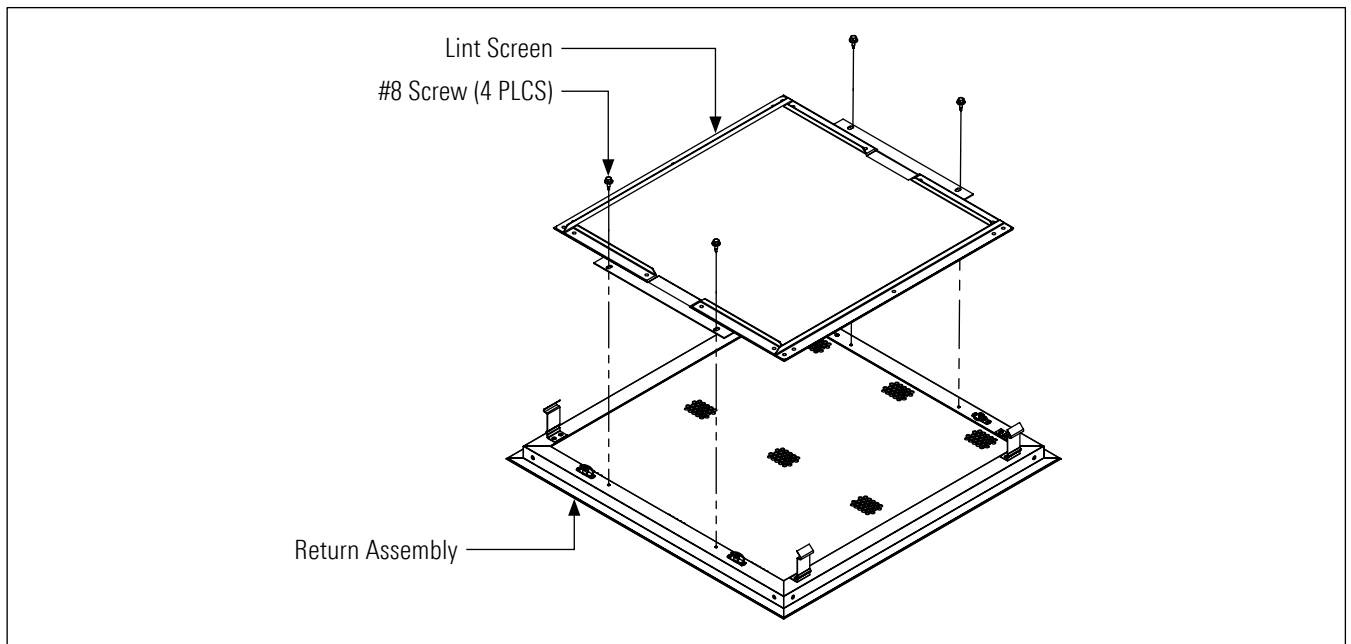


LINT SCREEN REMOVAL

3. CBLV12: Remove the lint screen by pulling it off the S-clips on the water coil plate.

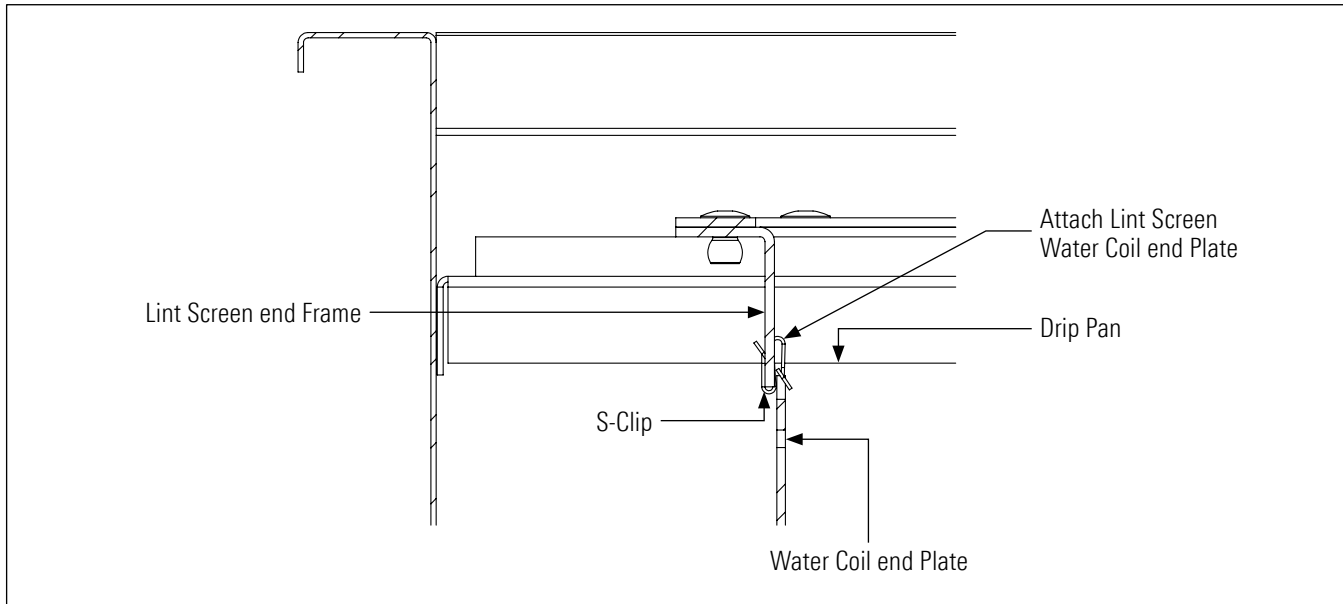


DIMENSIONS & WEIGHTS

Chilled Beam Lengths

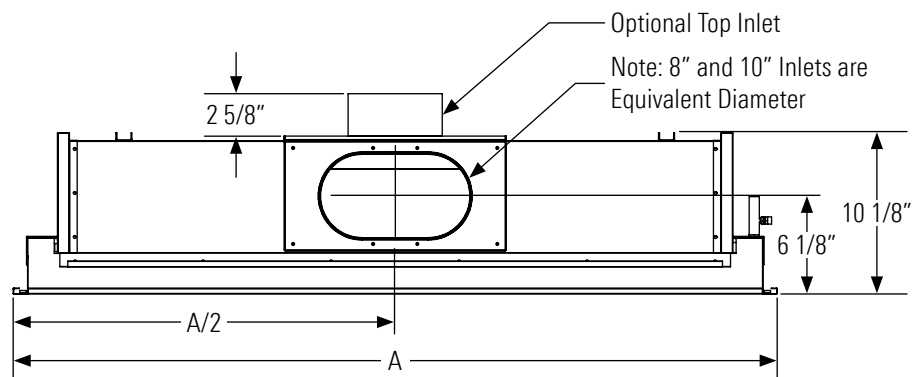

Nominal Length	Border Type	
	LAY-IN	NT
	A (in)	A (in)
2 Ft	23 3/4	23 3/8
3 Ft	35 3/4	35 3/8
4 Ft	47 3/4	47 3/8
5 Ft	59 3/4	59 3/8
6 Ft	71 3/4	71 3/8
7 Ft	83 3/4	83 3/8
8 Ft	95 3/4	95 3/8
9 Ft	107 3/4	107 3/8
10 Ft	119 3/4	119 3/8


CBAL2

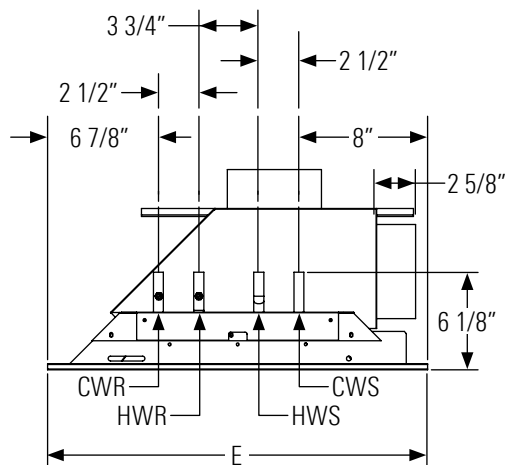


Nominal Width	E
LAY-IN	23 3/4
NT	23 3/8

DIMENSIONS & WEIGHTS


CBE2-24

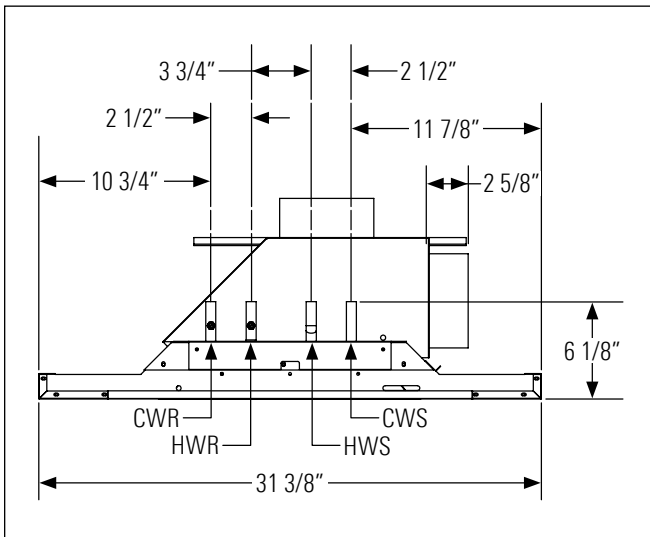


CBE2-12

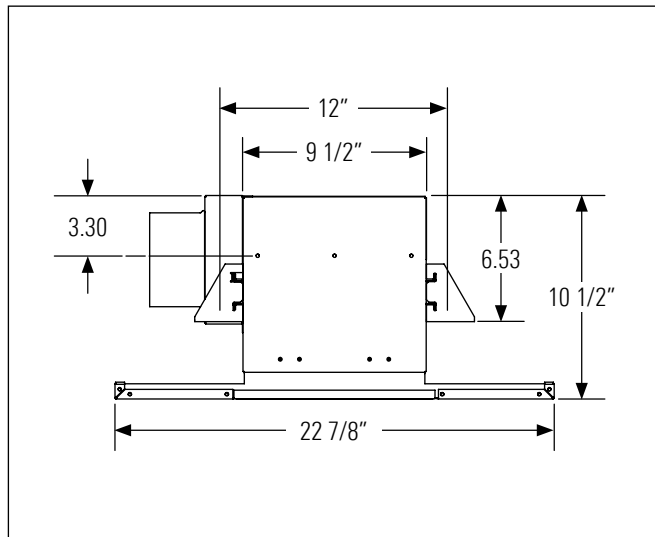

CBLV-12

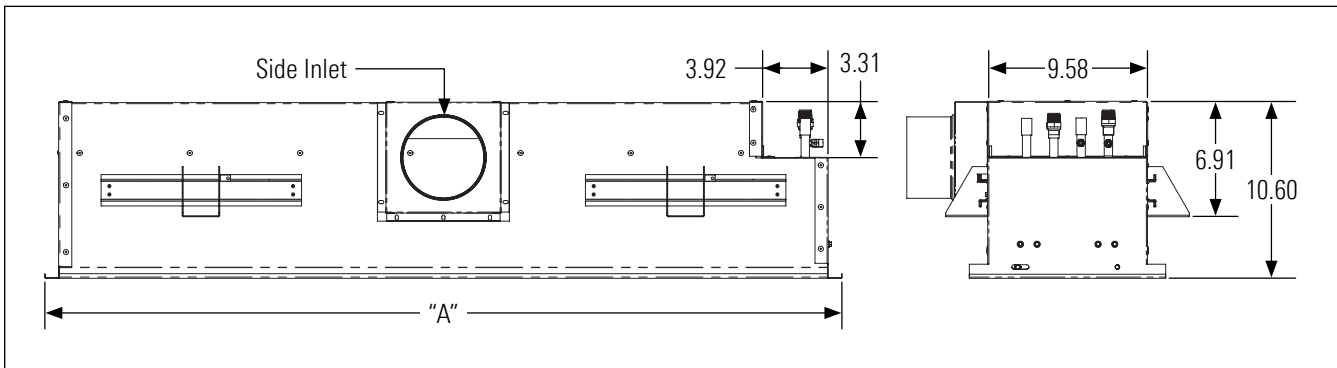

CBAM

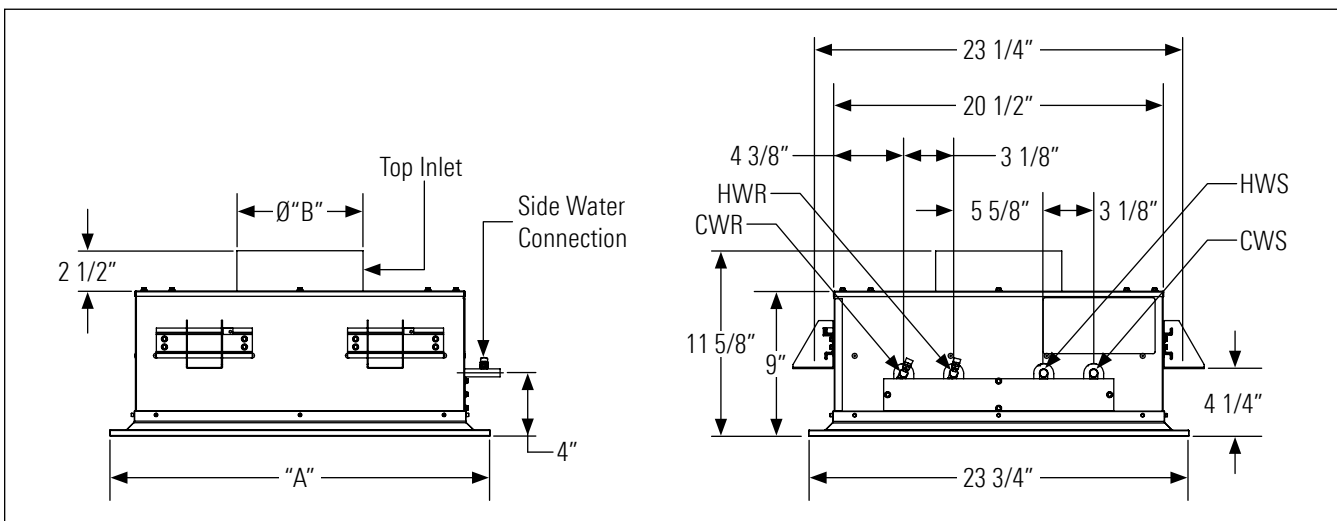


DIMENSIONS & WEIGHTS

Weight (lbs)	Model					
	Dry Coil					Wet Coil
Length	CBAL2	CBLV12	CBAM	CBE2-12	CBE2-24	CBAL2
2'	20	24	39	27	23	22
3'	31	34	-	37	34	35
4'	43	46	76	51	48	48
5'	50	56	-	62	56	56
6'	66	70	-	78	74	74
7'	77	82	-	91	86	86
8'	85	94	-	104	95	96
9'	96	106	-	117	107	108
10'	107	118	-	131	120	120

HOSE INSTALLATION

To install flexible hoses:

- 1. Ensure the unit is ordered with 1/2" NPT Male or 3/4" 3PT Male fittings.
- 2. Order quantity:
 - 4 hoses for 4-pipe configurations
 - 2 hoses for 2-pipe configurations
- 3. Use appropriate tools (not included) to make hose connections. Do not overtighten.
- 4. Insulate supply hose connections if required by the project.

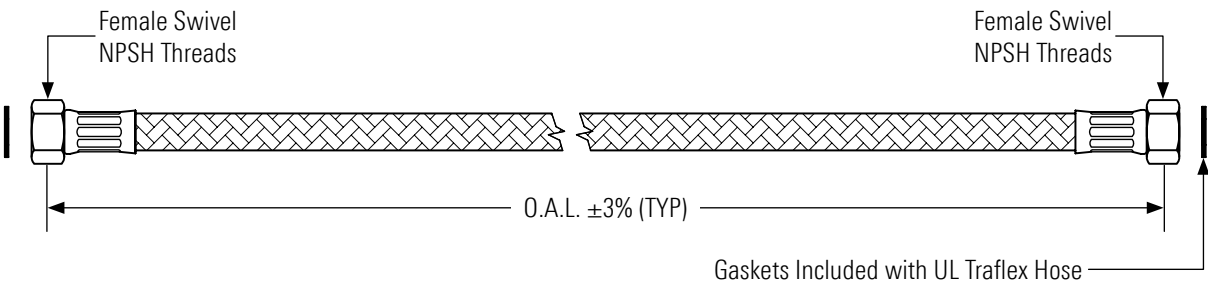


Connection Size		Length	Materials	
1/2" F		12	Core	Fabric Reinforced EPDM
		18	Braid	Stainless Steel
		24	Fitting	Brass OT58
3/4" F		18	Ferrule	Stainless Steel
		24	Real	EPDM
			Adapter	Brass

CONSTANT FLOW REGULATOR INSTALLATION

Titus Constant Flow Regulators (model TCFR) are sold separately.

1. Install the TCFR at the take-off immediately off the main duct.
2. The regulator's edge seal will grip the inner duct wall.
3. Install with the base oriented downward, if applicable.
4. Adjust flow rate using a Torx® T-10 bit.

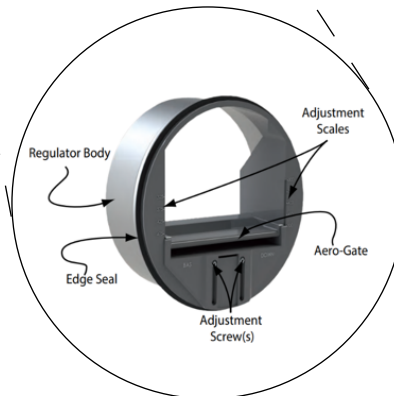


Install Constant flow Regulator

MANUFACTURING TAG DETAIL

C116352

C25AK67451



TITUS

ORD# X12345 060 - 001

03072025 - 04282025 A

24, 4, M3122P1CMDLSWT SM5 CP03 26 LS

1 OF 1

Model

Line #

Sales Order #

Ship Date

Line Tag

CBAL2

TAG#XXX

Width	Length	Nozzle	Throw	Piping	Vent	Drain	Liner	Connection	Inlet Location	Inlet Size	Return	Border	Finish	Accessories
24"	2'	M13	1 (WAY)	2P1C	M-Manual Air Vent	0-None	0-None	SWT- Sweat	TM-Top	4"	CP - Circular Perforation	3 - Lay-In Border Type	26 - White	0-None
	3'	M17	2 (WAY)	2P2C		D-Coil Drain	L-Liner		Middle	5"			35 - Black	LS-Lint Screen
	4'	M20		4P1C				MPT-1/2" Male	SM-Side Middle	6"				
	5'	M23		4P2C						8"				
	6'	M27								10"				
	7'	M27												
	8'													
	9'													
	10'													

CONTACT SUPPORT

605 Shiloh Rd Plano TX 75074

ofc: 972.212.4800

fax: 972.212.4884

www.titus-hvac.com

Email: specialtyprod@titus-hvac.com

LIMITED WARRANTY

LIMITED WARRANTY:

Unless otherwise expressly stated in TITUS's published specifications for the Goods, TITUS warrants that Goods are free from defects in material and workmanship, except for services which are warranted to be performed in a competent and diligent manner in accordance with any mutually agreed specifications. The foregoing warranty shall apply for eighteen (18) months from the date of shipment from TITUS's facility, except for services for which the warranty shall apply for ninety (90) days from the date of performance (the "Warranty Period"). Provided Buyer informs TITUS in writing of any breach of warranty prior to the expiration of the applicable Warranty Period, TITUS shall, as its sole obligation and Buyer's sole and exclusive remedy for any breach of this warranty, repair or replace/re-perform the Goods which gave rise to the breach or, at TITUS' option, refund the amounts paid by Buyer for the Goods which gave rise to the breach. Any repair, replacement or re-performance by TITUS hereunder shall not extend the applicable Warranty Period. The parties shall mutually agree on the specifications of any test to determine the presence of a defect. Unless otherwise agreed upon by TITUS in writing, Buyer shall bear the costs of access, de-installation, re-installation and transportation of Goods to TITUS and back to Buyer. These warranties and remedies are conditioned upon (a) the proper storage, installation, operation, and maintenance of the Goods and conformance with the proper operation instruction manuals provided by TITUS or its suppliers or subcontractors, (b) Buyer keeping proper records of operation and maintenance during the applicable Warranty Period and providing TITUS access to those records, and (c) modification or repair of the Goods only as authorized by TITUS. TITUS does not warrant the Goods or any repaired or replacement parts against normal wear and tear or damage caused by misuse, accident, or use against the instructions of TITUS. Any modification or repair of any of the Goods not authorized by TITUS shall render the warranty null and void. EXCEPT AS EXPRESSLY SET FORTH HEREIN, TITUS MAKES NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE WHICH ARE HEREBY DISCLAIMED TO THE EXTENT PERMITTED BY APPLICABLE LAW.

